

ALTERA®

MAX+PLUS® II GETTING STARTED

MAX+PLUS[®] II

Programmable Logic Development System

Getting Started



Altera Corporation
101 Innovation Drive
San Jose, CA 95134
(408) 544-7000

Altera, MAX, MAX+PLUS, FLEX, and FLEX Ability are registered trademarks of Altera Corporation. The following are trademarks of Altera Corporation: Classic, MAX 5000, MAX 5000A, FLEX 6000, MAX 7000, MAX 7000E, MAX 7000S, FLEX 8000, FLEX 8000A, MAX 9000, MAX 9000A, FLEX 10K, FLEX 10KA, MAX+PLUS II, PLDshell Plus, FastTrack, AHDL, MPLD, Turbo Bit, BitBlaster, ByteBlaster, MegaCore, OpenCore, PLS-ES, EP610, EP610I, EP600I, EP910, EP910I, EP900I, EP1810, EP1800I, EPM5032, EPM5064, EPM5128, EPM5128A, EPM5130, EPM5192, EPF6016, EPM7032, EPM7032V, EPM7064, EPM7064S, EPM7096, EPM7128E, EPM7128S, EPM7160E, EPM7192E, EPM7192S, EPM7256E, EPM7256S, EPC1, EPC1064, EPC1064V, EPC1213, EPC1441, EPF8282A, EPF8282AV, EPF8452A, EPF8636A, EPF8820A, EPF81188A, EPF81500A, EPM9320, EPM9320A, EPM9400, EPM9480, EPM9560, EPM9560A, EPF10K10, EPF10K20, EPF10K30, EPF10K40, EPF10K50, EPF10K50V, EPF10K70, EPF10K100, EPF10K100A, EPF10K130V, EPF10K250A. Product design elements and mnemonics are Altera Corporation copyright. Altera Corporation acknowledges the trademarks of other organizations for their respective products or services mentioned in this document, specifically: UNIX is a trademark of AT&T Bell Laboratories. Verilog is a registered trademark of Cadence Design Systems, Incorporated. Data I/O is a registered trademark of Data I/O Corporation. FLEXlm is a registered trademark of Globetrotter Software, Inc. HP is a registered trademark of Hewlett-Packard Company. IBM is a registered trademark and IBM PC and IBM RISC System/6000 are trademarks of International Business Machines Corporation. Intel is a registered trademark, and Pentium is a trademark of Intel Corporation. Mentor Graphics is a registered trademark of Mentor Graphics Corporation. Microsoft, MS-DOS, and Windows are registered trademarks and Windows NT and Windows 95 are trademarks of Microsoft Corporation. Adobe and Acrobat are registered trademarks of Adobe Systems Incorporated. OrCAD is a trademark of OrCAD Systems Corporation. SPARCstation is a trademark of SPARC International, Inc. and is licensed exclusively to Sun Microsystems, Inc. Sun Workstation and Solaris are registered trademarks, and Sun, SunOS, and OpenWindows are trademarks of Sun Microsystems, Incorporated. Synopsys is a registered trademark of Synopsys, Inc. Viewlogic Powerview is a registered trademark of Viewlogic Systems, Incorporated. Xilinx is a registered trademark of Xilinx, Inc. Altera acknowledges the trademarks of other organizations for their respective products or services mentioned in this document.

Altera reserves the right to make changes, without notice, in the devices or the device specifications identified in this document. Altera advises its customers to obtain the latest version of device specifications to verify, before placing orders, that the information being relied upon by the customer is current. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty. Testing and other quality control techniques are used to the extent Altera deems such testing necessary to support this warranty. Unless mandated by government requirements, specific testing of all parameters of each device is not necessarily performed. In the absence of written agreement to the contrary, Altera assumes no liability for Altera applications assistance, customer's product design, or infringement of patents or copyrights of third parties by or arising from use of semiconductor devices described herein. Nor does Altera warrant or represent any patent right, copyright, or other intellectual property right of Altera covering or relating to any combination, machine, or process in which such semiconductor devices might be or are used.

Altera's products are not authorized for use as critical components in life support devices or systems without the express written approval of the president of Altera Corporation. As used herein:

1. Life support devices or systems are devices or systems that (a) are intended for surgical implant into the body or (b) support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

Products mentioned in this document are covered by one or more of the following U.S. patents: 5,650,734; 5,642,262; 5,642,082; 5,633,830; 5,631,576; 5,621,312; 5,614,840; 5,612,642; 5,608,337; 5,606,276; 5,606,266; 5,604,453; 5,598,109; 5,598,108; 5,592,106; 5,592,102; 5,590,305; 5,583,749; 5,581,501; 5,574,893; 5,572,717; 5,572,148; 5,572,067; 5,570,040; 5,567,177; 5,565,793; 5,563,592; 5,561,757; 5,557,217; 5,555,214; 5,550,842; 5,550,782; 5,548,552; 5,548,228; 5,543,732; 5,543,730; 5,541,530; 5,537,295; 5,537,057; 5,525,917; 5,525,827; 5,523,706; 5,523,247; 5,517,186; 5,498,975; 5,495,182; 5,493,526; 5,493,519; 5,490,266; 5,488,586; 5,487,143; 5,486,775; 5,485,103; 5,485,102; 5,483,178; 5,481,486; 5,477,474; 5,473,266; 5,463,328; 5,444,394; 5,438,295; 5,436,575; 5,436,574; 5,434,514; 5,432,467; 5,414,312; 5,399,922; 5,384,499; 5,376,844; 5,375,086; 5,371,422; 5,369,314; 5,359,243; 5,359,242; 5,353,248; 5,352,940; 5,350,954; 5,349,255; 5,341,308; 5,341,048; 5,341,044; 5,329,487; 5,317,212; 5,317,210; 5,315,172; 5,309,046; 5,301,416; 5,294,975; 5,285,153; 5,280,203; 5,274,581; 5,272,368; 5,268,598; 5,266,037; 5,260,611; 5,260,610; 5,258,668; 5,247,478; 5,247,477; 5,243,233; 5,241,224; 5,237,219; 5,220,533; 5,220,214; 5,200,920; 5,187,392; 5,166,604; 5,162,680; 5,144,167; 5,138,576; 5,128,565; 5,121,006; 5,111,423; 5,097,208; 5,091,661; 5,066,873; 5,045,772; 4,969,121; 4,930,107; 4,930,098; 4,930,097; 4,912,342; 4,903,223; 4,899,070; 4,899,067; 4,871,930; 4,864,161; 4,831,573; 4,785,423; 4,774,421; 4,713,792; 4,677,318; 4,617,479; 4,609,986; 4,020,469 and certain foreign patents.

U.S. and European patents pending
Copyright © 1997 Altera Corporation. All rights reserved.



Printed on Recycled Paper



I.S. EN ISO 9001

Contents

Preface

MAX+PLUS II Documentation.....	xxiv
MAX+PLUS II Documents	xxiv
MAX+PLUS II Help	xxv
How to Use MAX+PLUS II Documentation	xxv
Documentation Conventions	xxvii
Terminology	xxvii
Typographic Conventions	xxviii
Key Combinations	xxx
Backus-Naur Form.....	xxx
MAX+PLUS II Help Updates.....	xxxi
Sample Files.....	xxxii
About MAX+PLUS II Getting Started	xxxiii

Section 1 MAX+PLUS II Installation

The read.me File	3
Registering MAX+PLUS II Software	4
Installing MAX+PLUS II on a PC.....	6
System Requirements for PCs.....	6
Installing MAX+PLUS II Software	7
Determining Free Disk Space	7
Installing the Software.....	7

Additional Windows NT Installation Steps	10
Installing Windows NT Drivers	10
Disabling Floating-Point Emulation	13
Using MAX+PLUS II with NTFS	13
Additional NEC 9801 Installation Steps	13
Installing MAX+PLUS II on a UNIX Workstation	14
System Requirements for UNIX Workstations	14
Hardware Requirements for UNIX Workstations	14
Software Requirements for UNIX Workstations	15
Installing the Software & Third-Party Interfaces.....	15
Mounting the CD-ROM.....	16
Running the Installation Program	17
Starting the Installation Program.....	17
Installing the Network Licensing File	21
Installing the Third-Party Interface Files	24
Unmounting the CD-ROM.....	25
Configuring the File Server & User Environment.....	25
Configuring a SPARCstation Running SunOS 4.1.3+	26
Configuring the File Server.....	26
Configuring the User Workstation	26
Configuring a SPARCstation Running Solaris 2.5+	27
Configuring the File Server.....	27
Configuring the User Workstation	28
Configuring an HP 9000 Series 700/800 Workstation	29
Configuring the File Server.....	29
Configuring the User Workstation	30
Configuring an IBM RISC System/6000 Workstation	31
Configuring the File Server.....	31
Configuring the User Workstation	31
Configuring Network Licensing.....	33
Configuring the License Server.....	33
Troubleshooting License Installation	34
License Administration Options File	38
License Administration FLEXlm Utilities.....	40
lmgrd	40
lmstat	41
lmdown	42
lmremove	43
lmreread	44
lmver	45
lmhostid	45
Installing the PC Software Guard.....	46
Specifying the Authorization Code or License File	48
Specifying the Authorization Code for a Software Guard Installation.....	48

Specifying the License File for a License File Installation.....	49
MAX+PLUS II Site License Information.....	49
Specifying Authorization Codes for MegaCore & AMPP Licenses	49
Installing the Adobe Acrobat Reader	51
Installing the Programming Hardware.....	53
Installing PC-Based Programming Hardware.....	53
Installing the LP6 Logic Programmer Card	54
Changing the LP6 Card Address Location.....	56
Installing the Master Programming Unit	57
Installing the FLEX Download Cable on a PC.....	60
Installing the BitBlaster on a PC or UNIX Workstation	61
Configuring an IBM RISC System/6000 Workstation	
Serial Port for Programming	64
Installing the ByteBlaster on a PC	65
Creating & Using a Local Copy of the maxplus2.ini File.....	67
MAX+PLUS II File Organization	69

Section 2 MAX+PLUS II—A Perspective

MAX+PLUS II Logic Design	74
The Design Flow	78
Starting MAX+PLUS II	79
The MAX+PLUS II Manager.....	81
MAX+PLUS II Applications.....	83
Design Files, Ancillary Files & Projects	86
Design Files.....	86
Ancillary Files.....	86
Projects.....	87
MAX+PLUS II Help.....	88
The Help Menu.....	88
The Help Window Button Bar	92
Where to Start in Help.....	93
How to Request Help on a Specific Topic	94
Design Entry	95
Global MAX+PLUS II Design Entry Features.....	97
Device, Resource & Probe Assignments	98
Back-Annotation.....	99
Global Project Device Options	100
Global Project Parameters.....	100
Global Project Timing Requirements	100
Global Project Logic Synthesis	100
Common Editor Functions	101
Symbol & Include File Generation.....	101
Node Location	101
Hierarchy Traversal	102

Context-Sensitive Menu Commands.....	102
Timing Analysis.....	102
Find & Replace Text.....	102
Undo, Cut, Copy, Paste & Delete.....	102
Print.....	102
MAX+PLUS II Graphic Editor	103
MAX+PLUS II Symbol Editor	106
MAX+PLUS II Text Editor	108
MAX+PLUS II Waveform Editor.....	111
MAX+PLUS II Floorplan Editor.....	114
Altera Hardware Description Language	117
VHDL.....	119
Verilog HDL.....	121
Primitives, Megafunctions, & Macrofunctions	123
Primitives.....	123
Megafunctions	123
Old-Style Macrofunctions	124
Project Hierarchy	125
Project Processing	127
MAX+PLUS II Compiler	128
Compiler Input Files	129
Compilation Process	130
Running the Compilation.....	131
Compiler Modules & Output Files	132
Compiler Netlist Extractor (Including Built-In EDIF Netlist Reader, VHDL Netlist Reader, Verilog Netlist Reader & XNF Netlist Reader).....	132
Database Builder	133
Logic Synthesizer	134
Partitioner.....	134
Fitter	135
Functional SNF Extractor	136
Timing SNF Extractor	136
Linked SNF Extractor	136
EDIF Netlist Writer	137
Verilog Netlist Writer	137
VHDL Netlist Writer.....	137
Assembler.....	137
Design Doctor Utility.....	138
Error Detection & Location	139
Project Verification	141
MAX+PLUS II Simulator	142
Functional Simulation.....	143
Timing Simulation.....	143
Linked Multi-Project Simulation.....	144

Simulator Highlights	144
MAX+PLUS II Waveform Editor	146
MAX+PLUS II Timing Analyzer	148
Device Programming	150
MAX+PLUS II Programmer	152

Section 3 MAX+PLUS II Tutorial

Introduction	156
Project Description	157
Design Entry & Project Processing	157
Project Verification & Device Programming	159
Tutorial Overview	160
Tutorial Files	160
Command Shortcuts	160
Getting Help	162
Context-Sensitive Help	162
Search Index	163
Session 1: Start a MAX+PLUS II Session	165
Session 2: Create a Graphic Design File	168
1. Create a New File	168
2. Specify the Project Name	170
3. Select a Palette Tool	171
4. Enter Logic Function Symbols	172
5. Set & Show Guidelines	174
6. Move a Symbol	176
7. Enter Input & Output Pins	176
8. Name the Pins	177
9. Connect the Symbols	179
10. Connect Nodes & Buses by Name	182
11. Save the File & Check for Basic Errors	183
12. Create a Default Symbol	184
13. Close the File	184
Session 3: Create Two Text Design Files	185
1. Create a New File & Specify the Project Name	186
2. Turn on Syntax Coloring	186
3. Enter the Design Name, Inputs & Outputs	187
4. Declare a Register	189
5. Enter Boolean Equations	190
6. Enter an If Then Statement	192
7. Check for Syntax Errors & Create a Default Symbol	193
8. Copy auto_max.tdf & Create a Default Symbol	193
Session 4: Create a Waveform Design File	196
1. Create a New File & Specify the Project Name	197
2. Create Input, Output & Buried Nodes	198

3. Set the Grid Size & Show the Grid.....	201
4. Edit the Buried State Machine Node Waveform	201
5. Edit the Input & Output Node Waveforms	204
6. Confirm the Edits	208
7. Check for Basic Errors & Create a Default Symbol	209
Session 5: Create the Top-Level Graphic Design File	210
Session 6: Compile the Project	216
1. Open the Compiler Window	217
2. Select a Device Family	217
3. Turn on the Smart Recompile Command	218
4. Turn on the Design Doctor Utility	219
5. Turn on the Security Bit	220
6. Select a Global Project Logic Synthesis Style	220
7. Turn on the Timing SNF Extractor	222
8. Specify Report File Sections to Generate	222
9. Run the Compiler	223
10. Locate the Source of a Message.....	226
11. Get Help on a Message	227
12. View the Report File	228
Session 7: View the Project in the Hierarchy Display	229
1. Open the Hierarchy Display Window	229
2. Bring chiptrip.gdf to the Front	230
3. Close any Open File(s).....	230
Session 8: View the Fit in the Floorplan Editor	231
1. Open the Floorplan Editor Window.....	232
2. Back-Annotate the Project & Edit Assignments	234
3. Recompile the Project	236
4. Display Routing Information in the Floorplan Editor Window.....	237
5. Display Equation & Routing Information with the Report File Equation Viewer	240
Simulation Overview	242
What is Simulation?	242
How Does the Chiptrip Simulation Work?	243
You & Your Vehicle.....	243
The Roads	244
Simulation Goals	244
Session 9: Create a Simulator Channel File	245
1. Create a Simulator Channel File	246
2. Add Additional Node(s) or Group(s) to the SCF	250
3. Rearrange the Order of the Nodes & Groups	251
4. Edit the Input Node Waveforms.....	252
5. Save & Close the File	254
Session 10: Simulate the Project	255
1. Open the Simulator Window	256
2. Specify Additional Output Files	257

3. Turn On Setup & Hold Time Monitoring.....	258
4. Run the Simulation	258
5. Create a Table File.....	260
Session 11: Analyze Simulation Outputs	261
1. View the Simulator Channel File.....	261
2. View the History, Log & Table Files	263
3. Re-Edit Your SCF if Necessary.....	264
4. Create, Simulate & Analyze finish.scf.....	265
Session 12: Analyze Timing	266
1. Open the Timing Analyzer Window	267
2. Run the Timing Analyzer	268
3. List a Propagation Delay Message	270
4. Locate the Delay Path in the Floorplan Editor	271
5. Locate the Delay Path in the Project's Design Files	272
6. Run a Timing Analysis in Another Mode	272
Session 13: Program an Altera Device	273
1. Open the Programmer Window	273
2. Create an Output Programmer Log File.....	274
3. Program the Device	275
Are We There Yet?.....	276
Appendix A MAX+PLUS II Command-Line Mode	277
Appendix B Altera Support Services	281
Appendix C Additional Workstation Configuration Information	
Customizing MAX+PLUS II Colors.....	286
Using the mwcolormanager Utility	288
Environment Variables	288
MAX2_HOME	289
MAX2_PLATFORM	289
MWCOM1, MWCOM2, MWCOM3 & MWCOM4.....	289
MWFONT_CACHE_DIR	290
MWLOOK	290
MWRGB_DB	291
MWSCREEN_HEIGHT & MWSCREEN_WIDTH.....	291
MWSYSTEM_FONT	291
MWUNIX_SHARED_MEMORY	291
MWWM.....	292
Fonts	292
Adding New Fonts	292
Font Aliases.....	294
Printers	294
Installing a New Printer	294

Printer Fonts.....	295
Glossary	297
Index	343

Illustrations

Figure		Page
1-1	Sample License File.....	21
1-2	Attaching the Software Guard to a PC.....	47
1-3	MAX+PLUS II Authorization Code Dialog Box.....	48
1-4	Default Switch Settings on the LP6 Card.....	55
1-5	Removing the Expansion Slot Cover.....	55
1-6	Locking the Board in Place	56
1-7	Master Programming Unit.....	58
1-8	Installing the Adapter.....	59
1-9	Releasing the Adapter	60
1-10	Connecting the FLEX Download Cable	61
1-11	Connecting the BitBlaster to the Serial Port on the Computer	62
1-12	BitBlaster and 10-Pin Female Connector.....	63
1-13	ByteBlaster Parallel Port Download Cable	65
2-1	MAX+PLUS II Design Environment	75
2-2	MAX+PLUS II Applications	76
2-3	MAX+PLUS II Manager Window.....	79
2-4	MAX+PLUS II Menu in the MAX+PLUS II Manager Window	81
2-5	Display of Multiple MAX+PLUS II Applications & Help.....	85
2-6	MAX+PLUS II Help Menu.....	89
2-7	MAX+PLUS II Design Entry Methods	96
2-8	MAX+PLUS II Assign Menu	97
2-9	MAX+PLUS II Graphic Editor.....	103

2-10	MAX+PLUS II Symbol Editor.....	106
2-11	MAX+PLUS II Text Editor	108
2-12	MAX+PLUS II Waveform Editor	111
2-13	MAX+PLUS II Floorplan Editor.....	114
2-14	AHDL Text Design File	117
2-15	VHDL Design File	119
2-16	Verilog Design File	121
2-17	MAX+PLUS II Hierarchy Display.....	125
2-18	Project Processing.....	127
2-19	MAX+PLUS II Compiler	128
2-20	MAX+PLUS II Message Processor	139
2-21	MAX+PLUS II Project Verification	141
2-22	MAX+PLUS II Simulator.....	142
2-23	MAX+PLUS II Waveform Editor	146
2-24	MAX+PLUS II Timing Analyzer	148
2-25	MAX+PLUS II Device Programming	151
2-26	MAX+PLUS II Programmer.....	152
3-1	Block Diagram of chiptrip	158
3-2	Map to Altera	159
3-3	auto_max.tdf	194
3-4	chiptrip.gdf	210
3-5	Map to Altera	243
3-6	chiptrip.scf Driving Route.....	245

Tables

Table	Page
1-1	UNIX Workstation Software Requirements..... 15
1-2	Commands for Mounting the CD-ROM..... 16
1-3	MAX+PLUS II Programming Hardware Configurations 53
1-4	LP6 Card I/O Addresses 57
1-5	BitBlaster Baud Rate Dipswitch Settings 63
1-6	MAX+PLUS II System Directory Structure..... 69
1-7	MAX+PLUS II Working Directory Structure..... 70
2-1	MAX+PLUS II Applications 83
2-2	MAX+PLUS II Help Menu Items..... 89
2-3	MAX+PLUS II Help Window Buttons..... 92
2-4	Altera Programming Hardware 150
B-1	Altera Support Services..... 282
C-1	Serial Ports 290

MAX+PLUS II Fundamentals

This section describes the MAX+PLUS II manual and on-line help documentation and conventions. You should be familiar with this information before using MAX+PLUS II documentation.

■	MAX+PLUS II Documentation	xvi
■	Documentation Conventions	xix
■	MAX+PLUS II Help Updates	xxiii
■	Sample Files	xxiv
■	About <i>MAX+PLUS II Getting Started</i>	xxv

MAX+PLUS II Documentation

MAX+PLUS® II documentation is designed for the novice as well as for the experienced user. It includes manuals and extensive, illustrated Help.

MAX+PLUS II Documents

MAX+PLUS II systems include the following documents:

<i>MAX+PLUS II Getting Started</i>	Contains step-by-step instructions on how to install MAX+PLUS II hardware, software, and licenses on PCs and UNIX workstations. It also provides an overview of the entire MAX+PLUS II system, and a tutorial that takes you from design entry to device programming. In addition, it contains information about MAX+PLUS II command-line operation and Altera's support services. Free electronic copies of this manual are also available from Altera's world-wide web site at http://www.altera.com .
<i>MAX+PLUS II AHDL</i>	Contains complete information on the Altera Hardware Description Language (AHDL™), including a detailed <i>How to Use AHDL</i> section with many examples.
<i>MAX+PLUS II VHDL</i>	Provides information on how to use the Very High Speed Integrated Circuit (VHSIC) Hardware Description Language (VHDL) with MAX+PLUS II, including a <i>How to Use MAX+PLUS II VHDL</i> section with many examples.
<i>MAX+PLUS II Verilog HDL</i>	Provides information on how to use the Verilog Hardware Description Language (HDL) with MAX+PLUS II, including a <i>How to Use MAX+PLUS II Verilog HDL</i> section with many examples.
<i>MAX+PLUS II Help Poster</i>	Provides handy and colorful descriptions of how to use on-line help in MAX+PLUS II.

MAX+PLUS II also includes the following Software Interface Guides, which are available in the \lit directory of the MAX+PLUS II CD-ROM as Adobe Portable Document Format (PDF) files. These guides provide detailed step-by-step examples and important guidelines:

- *Cadence & MAX+PLUS II Software Interface Guide*
- *Mentor Graphics & MAX+PLUS II Software Interface Guide*
- *Synopsys & MAX+PLUS II Software Interface Guide*
- *Viewlogic Powerview & MAX+PLUS II Software Interface Guide*

These Software Interface Guides are also available from Altera's world-wide web site at <http://www.altera.com>.



The MAX+PLUS II CD-ROM also includes the Adobe Acrobat Reader 3.0, which you can install on your hard drive in order to read the PDF files. Go to “[Installing the Adobe Acrobat Reader](#)” on page 51 for more information.

MAX+PLUS II Help

Your primary source of information on MAX+PLUS II is the complete on-line help. All of the information necessary to enter, compile, and verify a design and to program an Altera device is available in MAX+PLUS II Help.

Help also provides introductions to all MAX+PLUS II applications, guidelines for designing circuits with MAX+PLUS II, pin and logic cell numbers for each Altera device package, and summaries of other Altera documents, such as application notes, that can assist you with logic design.

How to Use MAX+PLUS II Documentation

How you use MAX+PLUS II documentation depends on your level of expertise and your approach to learning how to use a new tool.

If you are a novice user, you should take time to read the *MAX+PLUS II Getting Started* manual and complete the *MAX+PLUS II Tutorial* on page 155. Once you begin using MAX+PLUS II applications, you will find that the easy-to-use, extensive on-line help can quickly turn you into an expert MAX+PLUS II user. For basic information on using on-line help, refer to the *MAX+PLUS II Help Poster*. More detailed information on using Help is available in *MAX+PLUS II — A Perspective* on page 73.

If you are an experienced circuit designer or one who prefers to learn by experimenting, you will find the on-line help invaluable. Context-sensitive and menu-driven help give instant access to all MAX+PLUS II information.

Regardless of your level of expertise, you must follow the installation instructions provided in *MAX+PLUS II Installation* on page 1. Before you install the MAX+PLUS II hardware and software, you should also read the **read.me** file, located in the top-level directory of the MAX+PLUS II CD-ROM. Once you have installed MAX+PLUS II, you can open the **read.me** file through the Help menu in MAX+PLUS II.

If you are using EDA tools from Cadence, Mentor Graphics, Synopsys, or Viewlogic (Powerview), you should read the Software Interface Guide provided in the \lit directory of the MAX+PLUS II CD-ROM.

Altera Applications Engineers are also available to answer your questions. For more information about Altera's technical support services, see *Appendix A: Altera Support Services* on page 281.

Documentation Conventions

MAX+PLUS II manuals and MAX+PLUS II Help use the following conventions to make it easy for you to find and interpret information.

Terminology




The following terminology is used throughout MAX+PLUS II Help and manuals:

Term:	Meaning:
Button 1	Left mouse button.
Button 2	Right button on a two-button mouse, or middle and right buttons on a three-button mouse.
“point to”	Indicates that you should move the mouse so that the pointer is over the specified item.
“press”	Indicates that you must hold down a mouse button or key.
“click”	Indicates a quick press and release of a mouse button.
“double-click”	Indicates two clicks in rapid succession.
“choose”	Indicates that you need to use a mouse or key combination to start an action. For example, when you use the mouse to choose a button, you point to the button and click Button 1. When you use the keyboard to choose a command, you press Alt and then type letters that are underlined in the menu bar and menu.
“select”	Indicates that you need to highlight text and/or objects or an option in a dialog box with a key combination or the mouse. A selection does not start an action. For example: Select the AND2 primitive, then choose Delete from the Edit menu.
“turn on” / “turn off”	Indicates that you must click Button 1 on a checkbox or choose a menu command to turn a function on or off.

Typographic Conventions

MAX+PLUS II documentation uses the following typographic conventions:

Visual Cue:	Meaning:
Bold Initial Capitals	Command names, dialog box titles, and button names are shown in bold, with initial capital letters. For example: Find Text command, Save As dialog box, and Start button.
bold	Directory names, project names, disk drive names, filenames, filename extensions, and software utility names are shown in bold. Examples: \maxplus2 directory, d: drive, chiptrip.gdf file. These items are not case-sensitive in the Windows environment; however, they are case-sensitive in the UNIX workstation environment. MAX+PLUS II Help shows these items in the case appropriate to the workstation environment.
Initial Capitals	Keyboard keys, user-editable application window fields, and menu names are shown with initial capital letters. For example: Delete key, the Start Time field, the Options menu.
“Subheading Title”	Subheadings within a manual section are enclosed in quotation marks. In manuals, titles of help topics are also shown in quotation marks.
<i>Italic Initial Capitals</i>	Help categories, section titles in manuals, application note and brief names, checkbox options, and options in dialog boxes are shown in italics with initial capital letters. For example: <i>Text Editor Procedures</i> , the <i>Check Outputs</i> option, the <i>Directories</i> box in the Open dialog box.
<i>italics</i>	Variables are enclosed in angle brackets (< >) and shown in italics. For example: <filename>, <project name>.acf file.
<i>Bold Italics</i>	Manual titles are shown in bold italics with initial capital letters. For example: MAX+PLUS II Getting Started.

Visual Cue:	Meaning:
Courier font	Anything that must be typed exactly as it appears is shown in Courier. For example: c:\max2work\tutorial\chiptrip.gdf. Also, sections of an actual file, such as a Report File, references to parts of files (e.g., the AHDL keyword SUBDESIGN), and logic function names (e.g., DFF and 16cuds1r) are shown in Courier.
Bold Courier font	In syntax descriptions, bold Courier may be used to help distinguish literal text from variables.
1., 2., 3.,..., a., b., c.,..., and i., ii., iii.,...	Numbered steps are used in a list of items when the sequence of the items is important, such as the steps listed in a procedure.
■	Bullets are used in a list of items when the sequence of the items is not important.
v	The checkmark indicates a procedure that consists of one step only.
	The hand points to information that requires special attention.
	In MAX+PLUS II manuals, the feet show you where to go for more information on a particular topic.
	In MAX+PLUS II Help, the upward-pointing hand indicates that you can click Button 1 (the left mouse button) on any portion of the illustration that follows it to get help on that item. The mouse pointer changes to an upward-pointing hand when it is over a picture or word for which help is available.
Special symbols	Special symbols are used for these items: <ul style="list-style-type: none"> ↵ Enter key ↗ Low-to-high transition ↘ High-to-low transition

Key Combinations

Key combinations and sequences appear in the following format:

Format Cue:	Meaning:
Key1+Key2	A plus (+) symbol indicates that you must hold down the first key when you press the second key. For example: Ctrl+L means that you must hold down Ctrl while pressing L, then release both keys.
Key1,Key2	A comma (,) indicates that you must press the keys sequentially. For example: Alt,F1 means that you must press the Alt key and release it, then press the F1 key and release it.

Backus-Naur Form

The Backus-Naur Form (BNF) defines the syntax of the text file formats and message variables. BNF uses the following notation:

Characters:	Meaning:
::=	"is defined as"
<...>	Identifiers (i.e., variables)
[...]	Optional items
{ ... }	Repeated items (zero or more times)
... ...	Indicates a choice between items
:n:n	Suffix indicates a range (e.g., <name char>:1:8 means "from 1 to 8 name characters")
<i>italics</i>	Variables in syntax descriptions
Courier font	Literal text in syntax descriptions. Bold Courier font is sometimes used to help distinguish literal text from <i>italic variables</i> in syntax descriptions.

MAX+PLUS II Help Updates

MAX+PLUS II Help is updated whenever the MAX+PLUS II software is updated; therefore, the on-line information is always current.



If you find a discrepancy between a MAX+PLUS II manual and the MAX+PLUS II on-line Help, you should rely on the MAX+PLUS II Help information.

You can get information on changes to MAX+PLUS II software and Help by choosing **New Features in this Release** (Help Menu) in MAX+PLUS II. Late-breaking news on Help and software is also available with the **READ.ME** command (Help menu).



Between MAX+PLUS II software releases, check the Altera world-wide web page for additional news and information, including help from the Atlas solutions database. Go to **<http://www.altera.com>**.

Sample Files

A variety of sample design files are copied to your hard disk when you install MAX+PLUS II. The installation procedure automatically creates subdirectories for these files.



The pathnames below are shown using the PC pathname convention of backslash (\) characters, but UNIX pathnames use forward slash (/) characters. On a UNIX workstation, the **/max2work** directory is a subdirectory of the **/usr** directory. Otherwise, the file and directory organization is identical.

- The **\max2work\chiptrip** directory contains all files for the **chiptrip** tutorial project that is described in *MAX+PLUS II Getting Started*.
- The **\max2work\ahdl** directory contains all sample files used to illustrate AHDL features in MAX+PLUS II Help and in the *MAX+PLUS II AHDL* manual.
- The **\max2work\vhdl** directory contains all sample files used to illustrate VHDL features in MAX+PLUS II Help and in the *MAX+PLUS II VHDL* manual.
- The **\max2work\verilog** directory contains all sample files used to illustrate Verilog HDL features in MAX+PLUS II Help and in the *MAX+PLUS II Verilog HDL* manual.
- The **\max2work\edif** directory contains all sample files used to illustrate EDIF features in MAX+PLUS II Help.



Go to **“MAX+PLUS II File Organization” on page 69** for more information about MAX+PLUS II directory structure.

Go to the Altera-provided Software Interface Guide for your third-party environment for information on the directory structure and sample files installed for third-party interfaces to MAX+PLUS II.

About *MAX+PLUS II Getting Started*

MAX+PLUS II Getting Started contains the following sections:

Section 1: MAX+PLUS II Installation gives hardware, software, and license installation instructions for PCs and UNIX workstations.

Section 2: MAX+PLUS II—A Perspective is an introduction to MAX+PLUS II software. It describes the on-line help and all MAX+PLUS II applications.

Section 3: MAX+PLUS II Tutorial takes you step-by-step through all facets of designing logic with MAX+PLUS II. It demonstrates three design entry methods and shows how to compile and simulate a project, analyze timing performance, and program an Altera device.

Appendix A: MAX+PLUS II Command-Line Mode describes how to operate the MAX+PLUS II Compiler, Timing Analyzer, and Simulator in batch mode from the command prompt under UNIX, Microsoft Windows NT, and Microsoft Windows 95.

Appendix B: Altera Support Services explains how to contact Altera's user support services.

Appendix C: Additional UNIX Workstation Configuration Information describes how to change additional UNIX workstation configuration items that control the appearance of MAX+PLUS II windows, serial port configuration, screen height and width, and printer and screen fonts.

Glossary

Index

MAX+PLUS II Installation

This section describes how to install MAX+PLUS II software and programming hardware on PCs and UNIX workstations.

Installing MAX+PLUS II on PCs

If you are installing MAX+PLUS II on one or more PCs, read the instructions in the following sections:

■	The read.me File.....	3
■	Registering MAX+PLUS II Software.....	4
■	Installing MAX+PLUS II on a PC	6
■	Installing the PC Software Guard.....	46
■	Specifying the Authorization Code or License File	48
■	Installing the Adobe Acrobat Reader	51
■	Installing the Programming Hardware	53
■	Creating & Using a Local Copy of the maxplus2.ini File	67
■	MAX+PLUS II File Organization.....	69

Installing MAX+PLUS II on UNIX Workstations

If you are installing MAX+PLUS II on one or more UNIX workstations, read the instructions in the following sections:

■	The read.me File	3
■	Registering MAX+PLUS II Software	5
■	Installing MAX+PLUS II on a UNIX Workstation	14
■	Configuring Network Licensing	33
■	Specifying the Authorization Code or License File	48
■	Installing the Adobe Acrobat Reader	51
■	Installing the BitBlaster on a PC or UNIX Workstation	61
■	Creating & Using a Local Copy of the maxplus2.ini File	67
■	MAX+PLUS II File Organization	69



If you have any unanswered questions about MAX+PLUS II installation after reading this section or the **read.me** file, contact the Altera Applications Department:

Altera Corporation
Applications Department
101 Innovation Drive
San Jose, CA 95134
Telephone: (800) 800-EPLD (6:00 a.m. to 6:00 p.m. Pacific Time)
or (408) 544-7000 (7:30 a.m. to 5:30 p.m. Pacific Time)
Fax: (408) 544-6401



Go to *Appendix B: Altera Support Services* on page 281 for more information about contacting Altera for technical support, literature, and non-technical customer service.

The read.me File

The MAX+PLUS II **read.me** file provides up-to-date information on installation and operating requirements, including disk space and memory. You should read the **read.me** file before installing the software or hardware.

The **read.me** file is available in the top-level directory of the MAX+PLUS II CD-ROM. After installation, you can open the **read.me** file from the MAX+PLUS II Help menu.

Registering MAX+PLUS II Software

Registering your MAX+PLUS II software is necessary in order to receive future update information. In addition, for some MAX+PLUS II development systems, you must register your software in order to receive an authorization code that allows you to use the software.

You can register your MAX+PLUS II software in one of four ways, depending on the features included in your system and the hardware platform:

- Visit the Altera world-wide web site at <http://www.altera.com>.
- Register the first time you run the MAX+PLUS II software: a Fax Registration Form appears automatically to allow you to register. You can also access this form at any later time by choosing the **Register** button in the **Authorization Code** dialog box (Options menu) in MAX+PLUS II.
- Fill out the registration card attached to the “STOP, PLEASE READ THIS FIRST” card that is included with your MAX+PLUS II system.
- Fill out the “Workstation Registration and License File Request Form” included with your software to both register your software and obtain the license file required to install and run MAX+PLUS II for UNIX workstations.

This form asks you for the ID of the license server. The license server is the computer that will run the two Altera license daemons (**lmgrd** and **alterad**).

To determine the ID of the license server, type one of the following commands:

License Server Platform:

Command:

Sun SPARCstation running SunOS 4.1.3+	# /usr/bin/hostid ↵
Sun SPARCstation running Solaris 2.5+	# /usr/ucb/hostid ↵
HP 9000 Series 700/800 workstation running HP-UX 10.20+ (transpose the resulting value into hexadecimal to determine your license server ID)	# /usr/bin/uname -i ↵

License Server Platform:

IBM RISC System/6000 workstation running AIX 4.1+ (ignore the last two digits of the ID that is displayed and use the remaining 8 digits as the license server ID)

Command:

```
# /usr/bin/uname -m ↵
```

The FLEXlm licensing scheme allows either one or three license servers on a network. A single PC or UNIX workstation can function as the file server, license server, and user computer. The file server, license server, and user computer can also be separate UNIX workstations or PCs.



Go to [“Configuring Network Licensing” on page 33](#) for more information about configuring the license server.

Go to [Appendix B: Altera Support Services on page 281](#) for more information about contacting Altera technical support services.

Installing MAX+PLUS II on a PC

The following instructions describe the requirements and procedures for installing the MAX+PLUS II software on a PC or compatible computer running Microsoft Windows 95 or Windows NT. This section covers the following topics:

- System requirements for PCs
- Installing MAX+PLUS II software
- Additional Windows NT Installation Steps
- Additional NEC 9801 Installation Steps



Go to the *User's Guide* for your version of Microsoft Windows for information on optimizing your system to run MAX+PLUS II.

Go to the MAX+PLUS II **read.me** file for information on installing MAX+PLUS II software on PCs running other versions of the Windows operating system.

System Requirements for PCs

Your system must meet the following minimum requirements:

- Pentium class or higher- (recommended) or 486-based PC
- Microsoft Windows NT version 3.51 or 4.0 (recommended) or Microsoft Windows 95
- Microsoft Windows-compatible graphics card and monitor
- CD-ROM drive
- Microsoft Windows-compatible 2- or 3-button mouse
- Full-length 8-bit slot for the programming card
- Parallel port



Go to the **read.me** file for specific information about disk space and memory requirements in the current version of MAX+PLUS II.

Go to the *User's Guide* for your version of Microsoft Windows for more information about fonts.

Installing MAX+PLUS II Software

The following instructions guide you through the installation of MAX+PLUS II on the PC. The following topics are covered:

■	Determining Free Disk Space.....	7
■	Installing MAX+PLUS II Software	7
■	Additional Windows NT Installation Steps.....	10
■	Additional NEC 9801 Installation Steps.....	13

Determining Free Disk Space

The **Install** program calculates whether you have enough free disk space for installation. The actual space required depends on the allocation unit size on your hard disk, which you can determine by typing `chkdsk` ↵ at a DOS prompt. Refer to the **read.me** file for precise information on the amount of hard disk space required for installation.

Regardless of which drive you select for installing the MAX+PLUS II software, the **Install** program requires at least 500 Kbytes of free hard disk space on your **c:** drive.

Installing the Software

The following steps describe first-time installation with the Altera **Install** program. Once you have completed the following installation procedure, you can run MAX+PLUS II programs directly from your hard disk.



Do not install MAX+PLUS II by copying files directly from the CD-ROM. The installation files are in compressed format and must be decompressed by the **Install** program.

These installation instructions assume the following conditions:

- Your hard disk drive is **c:**.
- You have already installed Windows NT 3.51 or 4.0 or Windows 95 in the **\windows** directory.



During installation, an internal error can occur if the portion of the `PATH` variable in your **autoexec.bat** file that specifies the location of your Windows directory does not include a disk drive letter. For example, a path of `\windows` will cause an internal error. You must edit the `PATH` variable to avoid this error.

To install the software, perform the following steps:

1. If you are using anti-virus software packages such as the **vsafe.com** anti-virus software provided with MS-DOS version 6.2 or the **Disk Protect** anti-virus software provided with Norton Utilities, Altera recommends that you disable these and other similar software packages in your **autoexec.bat** file before installing MAX+PLUS II.
2. Boot the computer from the hard disk and start Windows.
3. Insert the MAX+PLUS II CD-ROM into a caddy if necessary, insert it into your CD-ROM drive, and perform one of the following:



(For Windows NT 3.51) Choose **Run** from the Windows Program Manager File menu and type `<CD-ROM drive>:\pc\maxplus2\install` ↵ in the *Command Line* box.

or:



(For Windows NT 4.0 or Windows 95) Choose **Run** from the Windows Start menu and type `<CD-ROM drive>:\pc\maxplus2\install` ↵ in the *Open* box.

The MAX+PLUS II **Install** program starts. This program prompts you for all information needed to install MAX+PLUS II. You should install MAX+PLUS II in a separate directory from any previous MAX+PLUS II version. If your DOS path includes an existing MAX+PLUS II directory, the **Install** program will default to installing in that directory, so be sure to override the default directory during installation.



Because improvements and other changes in the latest version of MAX+PLUS II software may fit projects differently from other versions, you may wish to finish existing projects with the earlier version. Altera also recommends that you archive a project before upgrading the latest version of MAX+PLUS II so that you can return it to an earlier version, if necessary.

4. Follow the directions provided on-screen. To get help on any step in the installation process, choose the **Help** button.



You can abort the installation procedure at any time by choosing the **Exit** button.

5. If you wish, you can choose to leave the MAX+PLUS II Help files on the CD-ROM and have MAX+PLUS II access them from there. To have MAX+PLUS II access the Help files from the CD-ROM, follow these steps during installation:

- a. Choose **Custom Installation** in the **MAX+PLUS II Installation Options** dialog box.
- b. Turn off *MAX+PLUS II Help* under *Optional MAX+PLUS II Features*, and choose **Install**.
- c. After the **Install** program has finished, insert the following line in the [system] section of the **maxplus2.ini** file in your MAX+PLUS II system directory:

```
HELP_FILE_DIR=<CD-ROM drive>:\help ↵
```

6. During installation of MAX+PLUS II on a PC running Windows 95, you may receive an error message that states that the file **a.azp** was not extracted. To correct this error, disable write caching for SmartDrive by typing the following command at a DOS prompt, then reinstall MAX+PLUS II:

```
smartdrv /x ↵
```

7. If you receive an application error message while installing MAX+PLUS II on a Novell network, perform the following steps:
 - a. Reboot the computer, but do not log onto the network.
 - b. Reinstall MAX+PLUS II according to the installation instructions.
 - c. Reboot the computer and log onto the network.
8. Once you have successfully installed MAX+PLUS II, the **read.me** file appears automatically. You should check the **read.me** file for important information on the MAX+PLUS II software. After checking the **read.me** file, exit from Windows.

9. If you are using Windows 95, edit the setting for the `files` variable in your **config.sys** file, which is usually located in the top-level directory of your **c:** drive, as follows:

```
files=50 ←
```

10. The **Install** program may modify your **autoexec.bat** file, which also is usually in the top-level directory of your **c:** drive, to make MAX+PLUS II run properly. You should examine this file to check whether it is compatible with other software on your system. The **Install** program saves the original file as **autoexec.bak**.
11. Remove the CD-ROM from the drive and reboot your computer before starting MAX+PLUS II.



See “MAX+PLUS II File Organization” on page 69 for a description of the directories and subdirectories created during installation.

You can uninstall MAX+PLUS II by following these steps, beginning with step 1 and choosing the **Uninstall** button instead of the **Install** button.



Go to “Installing the Adobe Acrobat Reader” on page 51 for information on installing the Adobe Acrobat Reader that is needed to read the Altera-provided Software Interface Guides for Cadence, Mentor Graphics, Synopsys, and Viewlogic (Powerview) EDA tools.

Additional Windows NT Installation Steps

The following sections guide you through additional steps for installing MAX+PLUS II on the PC. The following topics are covered:

- Installing Windows NT Drivers
- Disabling Floating-Point Emulation
- Using MAX+PLUS II with NTFS

Installing Windows NT Drivers

On computers running Windows NT 3.51 or 4.0, you must install Windows NT drivers to support MAX+PLUS II after you run the **Install** program. The Sentinel driver is required for all MAX+PLUS II systems, and is automatically installed with MAX+PLUS II. The Altera Programmer driver

is required for systems that include the LP6 Logic Programmer Card; and the Altera ByteBlaster driver is required for systems that include the ByteBlaster. Both the Altera Programmer driver and the Altera ByteBlaster driver must be installed separately from MAX+PLUS II.



You do not need to install the Logic Programmer Card or the ByteBlaster before installing the Altera Programmer or Altera ByteBlaster drivers.

To install the Altera Programmer driver, follow these steps:

1. (Windows NT 3.51 only) Double-click Button 1 on the **Drivers** icon in the Control Panel, then choose the **Add** button to open the **Add** dialog box.

or:

(Windows 4.0 only) Double-click Button 1 on the **Multimedia** icon in the Control Panel, click Button 1 on the **Devices** tab, and choose the **Add** button to open the **Add** dialog box.

2. Select *Unlisted or Updated Driver* from the *List of Drivers* list box and choose **OK**. The **Install Driver** dialog box opens.
3. Type or select \<MAX+PLUS II system directory>\drivers in the text box, and choose **OK**. The **Add Unlisted or Updated Driver** dialog box opens.
4. Select *Altera Programmer* from the list box and choose **OK**. The **Altera Programming Hardware Setup** dialog box opens.
5. Select the appropriate bus type from the *Bus Type* list box. If you do not know the correct bus type, select *(E)ISA*.
6. Select an unused I/O base address in your PC for your LP6 Logic Programmer Card from the *Physical Address* drop-down list box. The Programmer Card uses 16 contiguous I/O addresses, starting at the selected base address. Altera Programmer Cards are shipped with the default address 280 hex. For more information about changing the I/O address of the Programmer Card, see ["Changing the LP6 Card Address Location" on page 56](#).
7. To install the driver at the current address, choose **OK**. The **System Setting Change** dialog box is displayed.

Your Logic Programmer Card will operate only at the specified address.

If necessary, you can change the driver's I/O address.

To change the driver's I/O address in Windows NT 3.51, follow these steps:

- a. Double-click button 1 on the **Drivers** icon in the Windows NT Control Panel. The **Drivers** dialog box opens.
- b. Select *Altera Programmer* from the *Installed Drivers* list box, then choose the **Setup** button to open the **Altera Programmer Driver Setup** dialog box and edit the driver's I/O address.

To change the driver's I/O address in Windows NT 4.0, follow these steps:

- a. Double-click Button 1 on the **Multimedia** icon in the Windows NT 4.0 Control Panel. The **Multimedia Properties** dialog box opens.
 - b. Click Button 1 on the **Devices** tab, select *Altera Programmer* under *Other Multimedia Devices*, and then choose the **Properties** button. The **Altera Programmer Properties** dialog box opens.
 - c. Choose **Settings** to open the **Altera Programming Hardware Setup** dialog box and edit the driver's I/O address.
8. If you wish to install another driver (e.g., for the ByteBlaster), choose the **Don't Restart Now** button in the **System Setting Change** dialog box and repeat the steps above to install another driver. Otherwise, choose the **Restart Now** button in the **System Setting Change** dialog box to reboot your computer.

To install the Altera ByteBlaster driver in Windows NT 3.51 or NT 4.0, follow these steps:

1. Repeat steps 1 through 3 above.
2. Select *Altera ByteBlaster* from the list box and choose **OK**.

3. To install the driver at the current address, choose **OK**. The **System Setting Change** dialog box is displayed.
4. Repeat step 8 above.

Disabling Floating-Point Emulation

If you are running MAX+PLUS II under Windows NT 3.51 or 4.0, Altera recommends that you turn floating-point emulation off to improve timing Simulator Netlist File (.snf) extraction time. Type the following command at the command prompt:

```
pentnt -o ←
```

If you do not have the **pentnt.exe** program, contact Microsoft. (In Windows NT 3.51, the **pentnt.exe** program is normally located in the **system32** subdirectory of your Windows NT directory.)

If you are running MAX+PLUS II under another Windows operating system, there is no user control over floating-point emulation.

Using MAX+PLUS II with NTFS

If MAX+PLUS II is installed on a PC running Windows NT 3.51 or 4.0 with NTFS, the **maxplus2.ini** file should be readable and writable by all users, or each user should have his or her own copy of the file. Each user must use the **System** control available in the Windows NT Control Panel to set the MAXPLUS2_INI environment variable equal to the drive and directory containing the appropriate **maxplus2.ini** file. See “[Creating & Using a Local Copy of the maxplus2.ini File](#)” on page 67.

Additional NEC 9801 Installation Steps

On NEC 9801 computers, you must modify the **\windows\system.ini** file after you run the **Install** program for MAX+PLUS II. Add the following lines to the **\windows\system.ini** file:

```
[sentinel] ←  
MACHINE=NEC9800 ←
```


Installing MAX+PLUS II on a UNIX Workstation

The following instructions describe the requirements and procedures for installing the MAX+PLUS II software on Sun SPARCstations running SunOS 4.1.3+ or Solaris 2.5+, HP 9000 Series 700/800 workstations, and IBM RISC System/6000 workstations. This section covers the following topics:

- System Requirements for UNIX Workstations 14
- Installing the Software & Third-Party Interfaces 15
- Configuring the File Server & User Environment..... 25
 - Configuring a SPARCstation Running SunOS 4.1.3+ 26
 - Configuring a SPARCstation Running Solaris 2.5+ 27
 - Configuring an HP 9000 Series 700/800 Workstation 29
 - Configuring an IBM RISC System/6000 Workstation..... 31

System Requirements for UNIX Workstations

The hardware and software system requirements listed here and in the **read.me** file must be met before you can install MAX+PLUS II on a UNIX workstation.

Hardware Requirements for UNIX Workstations

MAX+PLUS II for UNIX workstations requires the following minimum hardware configuration:

- One of the following workstations:
 - Sun Microsystems SPARCstation or compatible workstation
 - HP 9000 Series 700/800 workstation
 - IBM RISC System/6000 workstation
- ISO 9660-compatible CD-ROM drive
- Color monitor

Software Requirements for UNIX Workstations

MAX+PLUS II for UNIX workstations requires the following minimum software configuration:

Table 1-1. UNIX Workstation Software Requirements

System Type	Software Requirements
Sun SPARCstation	SunOS 4.1.3 or higher OpenWindows 3.0 or higher
	Solaris 2.5 or higher
HP 9000 Series 700/800	HP-UX 10.20 or higher
IBM RISC System/6000	AIX 4.1 or higher

Installing the Software & Third-Party Interfaces

MAX+PLUS II installation must be performed by a System Administrator with superuser or “root” privileges. The following steps describe first-time installation with the Altera **install.cd** program.

The installation procedure consists of two phases:

1. Installing the software on the file server
 - a. Installing the software and third-party interface files
 - b. Configuring the file server and user environments
2. Setting up the licensing software and server

You can complete phase 2 separately, if necessary. When you install an update to MAX+PLUS II, only the first phase of the installation process is required.

The installation instructions assume the following conditions:

- The UNIX environment is case-sensitive. You must enter directory names, filenames, and filename extensions exactly as shown.
- You are logged in as a superuser and you install MAX+PLUS II from a local CD-ROM drive. If not, your System Administrator must provide access to a remote CD-ROM drive.

- The default CD-ROM directory is **/cdrom**.
- MAX+PLUS II will be installed in the **/usr/maxplus2** directory. The installation procedure creates the **maxplus2** directory if it does not already exist.

If you use a different CD-ROM directory or MAX+PLUS II system directory name, substitute the appropriate name in the installation steps.



Boldface text represents text that appears on screen; *Courier* font indicates text you must type. The % character indicates the UNIX C-shell prompt; the # character indicates the superuser prompt. Commands that do not fit on a single line in this manual are indicated by indentations of subsequent lines.

Mounting the CD-ROM

Before installing the software, you must mount the CD-ROM. The commands to do so vary depending on the workstation.

1. Insert the MAX+PLUS II CD-ROM into a caddy if necessary and insert the caddy into your CD-ROM drive.
2. Locate your workstation in [Table 1-2](#) and type the corresponding commands.

Table 1-2. Commands for Mounting the CD-ROM (Part 1 of 2)

Workstation & Operating System	Commands to type
Sun SPARCstation SunOS 4.1.3+	<pre># mkdir /cdrom ↵ # mount -t hsfs -o ro /dev/sr0 /cdrom ↵ # cd /cdrom ↵</pre>
Sun SPARCstation Solaris 2.5+	<p>If you are running Volume Manager, the CD-ROM will be mounted automatically as /cdrom/cdrom0, and only the last command below is needed. Otherwise, type all three of the following commands:</p> <pre># mkdir /cdrom/cdrom0 ↵ # mount -F ufs -r /dev/dsk/c0t6d0s2 /cdrom ↵ # cd /cdrom/cdrom0 ↵</pre>

Table 1-2. Commands for Mounting the CD-ROM (Part 2 of 2)

Workstation & Operating System	Commands to type
HP 9000 Series 700/800	<pre># mkdir /cdrom ↵ # /etc/mount -t cdrfs /dev/dsk/<SCSI ID of the CD-ROM drive>s0 /cdrom ↵ # cd /cdrom ↵</pre>
IBM RISC System/6000	<pre># mkdir /cdrom ↵ # crfs -v cdrfs -p ro -dcd0 -m /cdrom -Ano -tn ↵ # mount -v cdrfs -r /dev/cd0 /cdrom ↵ # cd /cdrom ↵</pre>

Running the Installation Program

The installation program has several phases, each of which can be completed separately. These phases are as follows:

- Starting the installation program
- Installing the network licensing file
- Installing the third-party interface files

You can run the installation program as many times as necessary to complete your installation.

Starting the Installation Program

To start the MAX+PLUS II installation program, type `./install.cd ↵` at the # prompt.

or:

If you mounted the CD-ROM on an HP 9000 Series 700/800 workstation, type `./INSTALL.CD\;1 ↵` at the # prompt.



You can quit the installation procedure at any time by typing `Ctrl+C ↵`.

The following text is displayed:

MAX+PLUS II Workstation Installation
Copyright (c) Altera Corporation 1997

Type Ctrl+C <Return> to quit installation at any time.

Type the full pathname of the directory where the MAX+PLUS II CD-ROM is mounted (default: /cdrom):

Press **↵** if the MAX+PLUS II CD-ROM is mounted in the default directory. Otherwise, type the correct directory name, then press **↵**.

Would you like to install the MAX+PLUS II system files (y/n):

Type **n** **↵** to skip installation of the system files. Type **y** **↵** to install the MAX+PLUS II system files. The following prompt is displayed:

Type the full pathname of the system directory where MAX+PLUS II will be installed (default: /usr/maxplus2):

Press **↵** to accept the default directory. Otherwise, type the name of the desired directory and press **↵**.

You may install MAX+PLUS II on one or more of the following platforms:

Platform	System Type	Operating System
-----	-----	-----
sunos	Sun SPARCstation	SunOS 4.1.3+ (Solaris 1.x)
solaris	Sun SPARCstation	Solaris 2.5+ (SunOS 5.5+)
hp	HP 9000 Series 700/800	HP-UX 10.20+
rs6000	IBM RISC System/6000	AIX 4.1+

Enter one or more of the platform names listed above
(choices are: sunos, solaris, hp, rs6000)
(default: solaris):

Press **↵** to accept the default platform. Otherwise, type the name(s) of the desired platform(s), then press **↵**. To install MAX+PLUS II for multiple platforms simultaneously, type multiple platform names separated by spaces, e.g., `solaris hp` **↵**.

If you type multiple platform names at the prompt, the following prompt appears:

**Enter license server platform type
(choose one of: solaris sunos)
(default: solaris):**

Press **↵** to accept the default platform. Otherwise, type the name of the desired license server platform, then press **↵**.

The MAX+PLUS II Help files are available on the installation CD-ROM in the /cdrom/help directory, although Altera recommends installing the Help files in your MAX+PLUS II system directory.

Would you like to install the MAX+PLUS II Help files? (y/n):

Type **y** **↵** to install the Help files. If you want to leave the Help files on the CD-ROM and run them from there, type **n** **↵**.



If you type **n** **↵**, the installation program inserts the following line in the [system] section of your **/usr/maxplus2/maxplus2.ini** file to allow MAX+PLUS II to access the Help files from the CD-ROM:

```
HELP_FILE_DIR=<CD-ROM path>: /help ↵
```

Would you like to install or modify your network license file? (y/n)

If you type **y** **↵**, you will be prompted for license file information during the installation phase. If you type **n** **↵**, the installation program skips the license file installation. You can also install a network license file manually, as described in [“Installing the Network Licensing File” on page 21](#).

Would you like to install the MAX+PLUS II Sample/Tutorial files? (y/n)

Type **n** **↵** to skip installation of the MAX+PLUS II Sample/Tutorial files.

Type **y** **↵** to install the sample files and the files for the **chiptrip** tutorial described in *Section 3: MAX+PLUS II Tutorial*.

If you type **y** **↵**, the following prompt is displayed:

Type the full pathname of the working directory where the MAX+PLUS II Sample/Tutorial files will be installed (default: /usr/max2work):

Press **↵** to accept the default directory. Otherwise, type the name of the desired directory and press **↵**.

Would you like to install third-party interfaces? (y/n)

If you selected multiple platforms at the earlier prompt and type **y ↵**, the following prompt is displayed:

**Enter third-party installation platform type
(choose one of: solaris sunos)
(default: solaris):**

Press **↵** to accept the default platform. Otherwise, type the name of the desired third-party installation platform, then press **↵**.

Some or all of the following information is displayed:

CD-ROM directory:	<i><CD-ROM directory name></i>
Install system files:	<i><yes or no></i>
MAX+PLUS II system directory:	<i><system directory name></i>
Platforms to install:	<i><selected platform(s)></i>
License server platform:	<i><selected platform></i>
Install Help:	<i><yes or no></i>
Install/modify license file:	<i><yes or no></i>
Install sample/tutorial files:	<i><yes or no></i>
MAX+PLUS II working directory:	<i><working directory name></i>
Install third-party interfaces:	<i><yes or no></i>
Third-party interface platform:	<i><selected platform></i>

Is this information correct? (y/n):

Type **y ↵** if the information is correct. Type **n ↵** to change any incorrect item(s). You will be given the option to restart the installation program.

If you type **y ↵**, the installation program deletes any existing files from the specified MAX+PLUS II system and working directories, checks to see that disk requirements are met, and then installs the items you selected.



If you chose to install the network licensing file, go to “Installing the Network Licensing File,” next. If you chose to install the third-party interfaces, go to “Installing the Third-Party Interface Files” on page 24 and “Installing the Adobe Acrobat Reader” on page 51 for information on installing the Adobe Acrobat Reader that is needed to read the Altera-provided Software Interface Guides for Cadence, Mentor Graphics, Synopsys, and Viewlogic (Powerview) EDA tools. Otherwise, go to “Unmounting the CD-ROM” on page 25.

Go to “MAX+PLUS II File Organization” on page 69 for information about the directory structure of the files installed for MAX+PLUS II.

Installing the Network Licensing File

You can install the **license.dat** file needed for network licensing in one of two ways:

- Manually create a copy of the **license.dat** file
- Run the **install.cd** program

When you register your MAX+PLUS II system, Altera provides you with a “Node Authorization” form that includes the license file required to run MAX+PLUS II on your workstation. Go to “Registering MAX+PLUS II Software” on page 4 for instructions.

Figure 1-1 shows a sample license file.

Figure 1-1. Sample License File

	Server name	Server ID number	Optional port number						
SERVER	alice	08000917ae82	1800						
SERVER	king	08000926ab6f	1800						
SERVER	queen	08000913b4c2	1800						
DAEMON	alterad	/usr/maxplus2/adm/alterad							
FUTURE	maxplus2	alterad	0.000	01-dec-97	1	3B2A134641C57735B618	"ALTERA"		

If you receive a **license.dat** file from Altera, go through the following steps:

- ✓ Type or save the file as `/<MAX+PLUS II system directory>/adm/license.dat`. If you already have a **license.dat** file, edit the existing file to add the new Altera-provided information.

or:

- ✓ When the installation program displays the following prompt, type `y ↵`.

Would you like to install or modify your network license file? (y/n)

The installation program displays the following prompt:

MAX+PLUS II License File Installation
Copyright (c) Altera Corporation 1997

Type the full pathname of the system directory where MAX+PLUS II has been installed (default:/usr/maxplus2)

Press `↵` to accept the default directory. Otherwise, type the name of the desired directory and press `↵`.

Choose one of the following options:

1. **Create a new license**
2. **Update an existing license**

If you type `1 ↵`, the following prompt is displayed (if you type `2 ↵`, a shortened version of the same prompt is displayed):

The following information is required to install the network licensing file:

1. **The number of license servers at your site**
2. **The host name and host ID for each license server**
3. **The MAX+PLUS II product being licensed**
4. **The maximum number of users that MAX+PLUS II will support concurrently**
5. **The license expiration date**
6. **The authorization code from Altera Customer Service**

Do you want to continue? (y/n)

If you type **y** ↵, you are prompted to enter the licensing information provided by Altera. To quit license installation, type **n** ↵.

You can read the information from the Altera-provided **license.dat** file to obtain the information needed to respond to the installation program prompts on the features, expiration date, number of licenses, and authorization code.

Enter the number of license servers: (1/3) <number of license servers> ↵

You are asked for the host name and ID for each license server:

Enter the host name for the license server: <host name for license server> ↵**Enter the host ID for the license server: <host ID number> ↵****Which feature do you wish to install? Choose one:**

- 1. **maxplus2** (MAX+PLUS II Base System)
- 2. **maxplus2vhdl** (VHDL Synthesis)
- Q. **Quit**

(Choose 1, 2, or Q):

<feature number> ↵

Enter the software expiration date [<default expiration date>]:

<expiration date> ↵

Enter the maximum number of users: <number of users> ↵**Enter the authorization code: <authorization code> ↵****Is the information correct? (y/n/q)**

If you think the information you entered may not be correct, type **n** ↵. The license file installation starts again from the beginning, to allow you to accept or change each of your original responses.

To quit the license installation, type **q** ↵.

To accept the information as correct, type **y** **↵**. The following messages are displayed:

Your license file has been created. It is located in
/<MAX+PLUS II system directory>/adm/license.dat.

The MAX+PLUS II license installation is complete.



If you chose to install the third-party interfaces, go to “**Installing the Third-Party Interface Files**,” next. Otherwise, go to “**Unmounting the CD-ROM**” on page 25.

Installing the Third-Party Interface Files

If you chose to install the third-party interface files, the installation program displays the following prompt:

Third-Party Interfaces Installation:

- | | | | |
|----|------------------|---|--------|
| 1. | Cadence-Composer | x | Mbytes |
| 2. | Cadence-Concept | x | Mbytes |
| 3. | Mentor Graphics | x | Mbytes |
| 4. | Synopsys | x | Mbytes |
| 5. | Viewlogic | x | Mbytes |
| 6. | All | | |
| 7. | Quit | | |

Enter one or more numbers:

For example, to install both Synopsys and Viewlogic files, you must type **4, 5** **↵** or **4 5** **↵**. To quit installation, type **7** **↵**.

Once the installation of the third-party interface files is complete, the following message is displayed:

Third-party interface installation is complete.



Go to “**Installing the Adobe Acrobat Reader**” on page 51 for information on installing the Adobe Acrobat Reader that is needed to read the Altera-provided Software Interface Guides for Cadence, Mentor Graphics, Synopsys, and Viewlogic (Powerview) EDA tools. Otherwise, if you have finished installing MAX+PLUS II software, go to “**Unmounting the CD-ROM**,” next.

Go to the Altera-provided Software Interface Guide for your third-party environment for information on the directory structure of the files installed for third-party interfaces to MAX+PLUS II.

Unmounting the CD-ROM

To unmount the CD-ROM, type `umount /cdrom` at the # prompt.



Go to “[Configuring the File Server & User Environment](#),” next, to continue the installation process.

Configuring the File Server & User Environment

You now must set up the file server and user environment to run MAX+PLUS II. The installation steps vary depending upon the computer platform.

For each platform you are configuring, follow these steps:

1. Configure the file server environment so that the MAX+PLUS II software installed on the file server is available to other computers on the network.
2. Configure the user (client) environment so that users can find the MAX+PLUS II software installed on the file server, and the MAX+PLUS II software can find the license server.

Continue to one of the following sections for instructions:

- [Configuring a SPARCstation Running SunOS 4.1.3+](#) 26
- [Configuring a SPARCstation Running Solaris 2.5+.....](#) 27
- [Configuring an HP 9000 Series 700/800 Workstation.....](#) 29
- [Configuring an IBM RISC System/6000 Workstation.....](#) 31

Configuring a SPARCstation Running SunOS 4.1.3+

This section describes the steps necessary to configure a Sun SPARCstation running SunOS 4.1.3 or higher.

Configuring the File Server

If a single workstation functions as the file server, license server, and user workstation, skip this section and go to “[Configuring the User Workstation](#),” next.

If the file server, license server, and user workstations are separate workstations, use the Network File System (NFS) to export the directory that contains MAX+PLUS II. To export the directory, follow these steps:

1. If a higher-level directory in the partition is not already exported, add the line `/usr/maxplus2` ↵ to the `/etc/exports` file on the file server.
2. Save the changes.
3. Export the file by typing `/etc/exportfs -a` ↵ at the # prompt.

Configuring the User Workstation

To configure the user workstation, follow these steps:

1. If the file server and user workstations are separate workstations, mount the `/usr/maxplus2` directory on the user workstation with NFS by typing the following commands:

```
# mkdir /usr/maxplus2 ↵
# /etc/mount <file server name>:/usr/maxplus2 /usr/
  maxplus2 ↵
```

2. Update the `PATH` and `LM_LICENSE_FILE` variables that are specified in the `.cshrc` file located in each user's home directory. You must edit this file for each user, or provide clear instructions that describe which lines need to be entered or edited.
 - a. Update each user's `PATH` environment variables to include `/usr/maxplus2/bin`:

```
set path = (/usr/local/bin /usr/maxplus2/bin) ↵
```

- b. Each user must have an `LM_LICENSE_FILE` variable that is set to the full directory pathname of the license file. To update this variable, add the following line to the `.cshrc` file for each user:

```
setenv LM_LICENSE_FILE /usr/maxplus2/adm/
license.dat ↵
```

If more than one application uses this environment variable, separate the different paths with a colon (:). For example:

```
setenv LM_LICENSE_FILE /usr/maxplus2/adm/
license.dat:/tmp/license.xyz ↵
```

3. After saving the changes to each user's `.cshrc` file, type the following commands:

```
# cd ↵
# source .cshrc ↵
```



Go to [“Configuring Network Licensing”](#) on page 33 for information about configuring the license server.

Configuring a SPARCstation Running Solaris 2.5+

This section describes the steps necessary to configure a Sun SPARCstation running Solaris 2.5 or higher.

Configuring the File Server

If a single workstation functions as the file server, license server, and user workstation, skip this section and go to [“Configuring the User Workstation,”](#) next.

If the file server, license server, and user workstations are separate workstations, use the Network File System (NFS) to export the directory that contains MAX+PLUS II.

To export the directory, follow these steps:

1. If a higher-level directory in the partition is not already exported, add the following line to the `/etc/dfs/sharetab` file on the file server:

```
/usr/maxplus2 "MAX+PLUS II" nfs rw "MAX+PLUS II
System Directory" ↵
```

2. Save the changes.
3. Export the file by typing `shareall` ↵ at the # prompt.

Configuring the User Workstation

To configure the user workstation, follow these steps:

1. If the file server and user workstations are separate workstations, mount the **/usr/maxplus2** directory on the user workstation with NFS by typing the following commands:

```
# mkdir /usr/maxplus2 ↵  
# /etc/mount <file server name>:/usr/maxplus2 /usr/  
maxplus2 ↵
```

2. Update the `PATH` and `LM_LICENSE_FILE` variables that are specified in the `.cshrc` file located in each user's home directory. You must edit this file for each user, or provide clear instructions that describe which lines need to be entered or edited.

- a. Update each user's `PATH` environment variables to include **/usr/maxplus2/bin**:

```
set path = (/usr/local/bin /usr/maxplus2/bin) ↵
```

- b. Each user must have an `LM_LICENSE_FILE` variable that is set to the full directory pathname of the license file. To update this variable, add the following line to the `.cshrc` file for each user:

```
setenv LM_LICENSE_FILE /usr/maxplus2/adm/  
license.dat ↵
```

If more than one application uses this environment variable, separate the different paths with a colon (:). For example:

```
setenv LM_LICENSE_FILE /usr/maxplus2/adm/  
license.dat:/tmp/license.xyz ↵
```

3. After saving the changes to each user's `.cshrc` file, type the following commands:

```
# cd ↵  
# source .cshrc ↵
```



Go to “**Configuring Network Licensing**” on page 33 for information about configuring the license server.

Configuring an HP 9000 Series 700/800 Workstation

This section describes the steps necessary to configure an HP 9000 Series 700/800 workstation.

Configuring the File Server

If a single workstation functions as the file server and user workstation, skip this section and go to “Configuring the User Workstation.”

If the file server and user workstations are separate workstations, use the Network File System (NFS) to export the directory that contains MAX+PLUS II. To export the directory, follow these steps:

1. Type `sam` ↵ at the `#` prompt to bring up the System Administration Manager (SAM).
2. Choose **NFS (Network File Systems) Configuration** from the File Systems Management menu.
3. Set options to allow remote (NFS) file systems access to the local file system's `/usr/maxplus2` directory.
4. In order to process large projects, Altera recommends configuring the file server to allow processes to use more than 64 Mbytes of memory.



If you are using SAM, follow these steps:

- a. Double click Button 1 on the **Kernel Configuration** icon. The **Kernel Configuration** window opens.
- b. Double-click Button 1 on the **Configurable Parameters** icon. The **Configurable Parameters** list box appears.
- c. Double-click Button 1 on `maxdsize` to select it from the list. The **Modify Configuration Parameter** `<machine name>` dialog box opens.
- d. Specify a value in the *Formula/Value* box and choose **OK**.

- e. In the **Kernel Configuration** window, choose **Create a New Kernel** (Actions menu) and choose **Yes** or **No** in the **Confirmation** dialog box.

If you choose **Yes**, SAM creates the new kernel based on the specified project size and then prompts you to reboot your workstation.

or:

- ✓ Refer to the documentation on **maxdsize** under *System Parameters* in the *HP System Administration Tasks Manual* for information on configuring the file server.

Configuring the User Workstation

To configure the user workstation, follow these steps:

1. If the file server and user workstations are separate workstations, mount the **/usr/maxplus2** directory on the user workstation with NFS by typing the following commands:

```
# mkdir /usr/maxplus2 ↵
# /etc/mount <file server name>:/usr/maxplus2 /usr/
maxplus2 ↵
```

2. Update the **PATH** and **LM_LICENSE_FILE** variables that are specified in the **.cshrc** file located in each user's home directory. You must edit this file for each user, or provide clear instructions that describe which lines need to be entered or edited.

- a. Update each user's **PATH** environment variables to include **/usr/maxplus2/bin**:

```
set path = (/usr/local/bin /usr/maxplus2/
bin...) ↵
```

- b. Each user must have an **LM_LICENSE_FILE** variable that is set to the full directory pathname of the license file. To update this variable, add the following line to the **.cshrc** file for each user:

```
setenv LM_LICENSE_FILE /usr/maxplus2/adm/
license.dat ↵
```

If more than one application uses this environment variable, separate the different paths with a colon (:). For example:

```
setenv LM_LICENSE_FILE /usr/maxplus2/adm/  
license.dat:/tmp/license.xyz ↵
```

3. After saving the changes to each user's **.cshrc** file, type the following commands:

```
# cd ↵  
# source .cshrc ↵
```



Go to **“Configuring Network Licensing”** on page 33 for information about configuring the license server.

Configuring an IBM RISC System/6000 Workstation

This section describes the steps necessary to configure an IBM RISC System/6000 workstation.

Configuring the File Server

If a single workstation functions as the file server and user workstation, skip this section and go to “Configuring the User Workstation,” next.

If the file server and user workstations are separate workstations, use the Network File System (NFS) to export the directory that contains MAX+PLUS II. To export the directory, follow these steps:

1. If a higher-level directory in the partition is not already exported, add the line `/usr/maxplus2 ↵` to the **/etc/exports** file on the file server.
2. Save the changes. The directory will be exported automatically.

Configuring the User Workstation

To configure the user workstation, follow these steps:

1. If the file server, license server, and user workstations are separate workstations, mount the **/usr/maxplus2** directory on the user workstation with NFS by typing the following commands:

```
# mkdir /usr/maxplus2 ↵  
# /etc/mount <file server name>:/usr/maxplus2 /usr/  
maxplus2 ↵
```

2. Update the PATH and LM_LICENSE_FILE variables that are specified in the **.cshrc** file located in each user's home directory. You must edit this file for each user, or provide clear instructions that describe which lines need to be entered or edited.

- a. Update each user's PATH environment variables to include **/usr/maxplus2/bin**:

```
set path = (/usr/local/bin /usr/maxplus2/  
bin...) ↵
```

- b. Each MAX+PLUS II user must have an LM_LICENSE_FILE variable that is set to the full directory pathname of the license file. To update this variable, add the following line to the **.cshrc** file for each user:

```
setenv LM_LICENSE_FILE /usr/maxplus2/adm/  
license.dat ↵
```

If more than one application uses this environment variable, separate the different paths with a colon (:). For example:

```
setenv LM_LICENSE_FILE /usr/maxplus2/adm/  
license.dat:/tmp/license.xyz ↵
```

3. After saving the changes to each user's **.cshrc** file, type the following commands:

```
# cd ↵  
# source .cshrc ↵
```



Go to **“Configuring Network Licensing” on page 33** for information about configuring the license server.

Refer to **“Configuring an IBM RISC System/6000 Workstation Serial Port for Programming” on page 64** for information on the special steps needed to configure an IBM RISC System/6000 workstation to use the BitBlaster.

Configuring Network Licensing

This section provides instructions for configuring network licensing for MAX+PLUS II. This section discusses the following topics:

■	Configuring the License Server	33
■	Troubleshooting License Installation.....	34
■	License Administration Options File	38
■	License Administration FLEXlm Utilities	40

Configuring the License Server

The FLEXlm licensing scheme allows either one or three license servers on a network. A single UNIX workstation can function as the file server, license server, and user workstation. The file server, license server, and user workstations (or user PCs) can also be separate computers.

To configure the license server, follow these steps:

1. If a single workstation functions as the file server and license server, skip this step and go to step 2.

If the file server and license server are separate computers, mount the **/usr/maxplus2** directory on the license server with NFS by typing the following commands:

```
# mkdir /usr/maxplus ↵
# /etc/mount <file server name>:/usr/maxplus2 /usr/
maxplus2 ↵
```

2. Start the license manager daemon on all license servers before starting MAX+PLUS II. Type the following command on each license server:

```
# /usr/maxplus2/adm/max2protd /usr/maxplus2 ↵
```

To invoke the license manager daemon automatically during start-up, add the following lines to the **/etc/rc.local** file on each license server:

```

if [-f /usr/maxplus2/adm/max2protd]; then ←
su <username> -c "umask 022 ; /usr/maxplus2/adm
/max2protd /usr/maxplus2" ←
echo -n max2protd ←
fi ←

```

3. Type the following command to make the file executable:

```
# chmod +x /etc/rc.local ←
```

4. If you are configuring an IBM RISC System/6000 as the license server, add the following command to the **/etc/inittab** file after the lines that invoke networking:

```
rclocal:2:wait:/etc/rc.local > /dev/console 2>&1 ←
```

Troubleshooting License Installation

Most installation errors are caused by improperly installed license daemons (**lmgrd** and **alterad**). If you have completed the procedures described for the software and license installation but the daemons have not started, you must verify that the daemons can be located and have the correct permissions. This section lists the most common error messages that can occur during installation, provides information on possible causes, and suggests corrective actions.

For help with error messages not described here and further assistance with troubleshooting license administration, contact the Altera Applications Department. Go to *Appendix B: Altera Support Services* for more information about technical support.

Message: /usr/maxplus2/max2protd: Command not found

Cause: The **max2protd** script or the **lmgrd** or **alterad** daemons cannot be located when you try to start them manually or at system start-up. The **/usr/maxplus2** directory has not been properly mounted with NFS.

Action: Verify that the **/usr/maxplus2** directory, which is exported by the file server with NFS, has been successfully mounted by the license server. This directory should have been mounted when you set up the file server environment, as described in the *“Configuring the File Server & User Environment”* section for your computer. To

verify that the directory has been mounted correctly, type the following commands on the license server:

```
# cd /usr/maxplus2/adm ↵
# ls -l ↵
```

The **ls** command output must include the following lines, which list the **max2protd**, **lmgrd**, and **alterad** daemons:

```
-rwxr-xr-x 1 root 278528 jun 01 13:03 alterad
-rwxr-xr-x 1 root 81920 jun 01 13:04 lmgrd
-rwxr-xr-x 1 root 568 jun 01 11:02 max2protd
```

The dates and file sizes may be different, but the three named files must be present. If the named files are not displayed, the directory has not been mounted correctly. Refer to the [“Configuring the File Server & User Environment”](#) section for your computer for instructions on how to mount the **/usr/maxplus2** directory.

Message: license daemon: execl failed

Cause: The **alterad** daemon does not exist or cannot be executed.

Action: Verify the existence of the **alterad** daemon by typing the following commands:

```
# cd /usr/maxplus2/adm ↵
# ls -l ↵
```

The output of the **ls** command must include the following lines, which list the **max2protd**, **lmgrd**, and **alterad** daemons:

```
-rwxr-xr-x 1 root 278528 Jun 01 13:03 alterad
-rwxr-xr-x 1 root 81920 Jun 01 13:04 lmgrd
-rwxr-xr-x 1 root 568 Jun 01 11:02 max2protd
```

If the MAX+PLUS II software cannot find the **alterad** daemon in this directory, reinstall the MAX+PLUS II software as described in [“Installing the Software & Third-Party Interfaces”](#) on page 15.

If the **alterad** daemon exists, verify that it can be executed by typing `chmod 755 alterad ↵`.

Message: Retrying socket bind (address in use)

Cause: The license daemons are not running because another **lmgrd** license manager daemon is running and using the same TCP/IP port address.

Action: Terminate the daemon processes:

1. Ask all users who use **lmgrd**-based applications to log off.
2. If MAX+PLUS II is installed on a Sun SPARCstation (SunOS 4.1.3 or higher) or an IBM RISC System/6000 workstation, type the following command to determine the license daemon process IDs:

```
# ps waux | grep lmgrd | grep -v grep ↵
```

The response includes the entries for active license manager daemons. For example:

```
root    14803 0 0 0 2 60 76 ? S Jun 01 0:03
        /usr/maxplus2/adm/lmgrd -c /usr/maxplus2
        /adm/license.dat
```

or:

If MAX+PLUS II is installed on an HP 9000 Series 700/800 workstation or a Sun SPARCstation running Solaris 2.5 or higher, type the following command to determine the license daemon process IDs:

```
# ps -e | grep lmgrd | grep -v grep ↵
```

The response includes the entries for active license manager daemons. For example:

```
11478 ttyp2 0:00 lmgrd
```

3. Terminate the license daemons with the following command:

```
kill <pid> ↵
```

The `<pid>` variable is the process ID number that corresponds to the license daemon. In the example shown in step 2, `<pid>` would be 14803.



Do not use the `-9` option with the `kill` command.

4. Edit the `/usr/maxplus2/adm/license.dat` file and replace 1800 with a unique four-digit port address that is not used elsewhere on your system and does not conflict with other applications that use **lmgrd**. To replace the port address, change the third field in the `SERVER` line in the **license.dat** file.

In the following example, you would replace 1800 with a unique four-digit number:

```
SERVER artoo 54321234 1800 ↵
```

5. Save the changes to `/usr/maxplus2/adm/license.dat`, then restart the Altera daemon by typing `/usr/maxplus2/adm/max2protd` ↵ at the `#` prompt.

You should also restart the daemons for other applications.

Message: Starting Altera License daemons
Cannot locate the license manager daemon (lmgrd)

Cause: The **max2protd** script or the **lmgrd** or **alterad** daemons cannot be executed from the UNIX prompt or at start-up with the `/etc/rc.local` start-up command on a Sun SPARCstation or IBM RISC System/6000 workstation or with the `/etc/rc` command on an HP 9000 Series 700/800 workstation.

Action: Verify that the `/usr/maxplus2` directory, which is exported by the file server with NFS, has been successfully mounted by the license server. This directory should have been mounted when you set up the file server and the license server environments, as described in the [“Configuring the File Server & User Environment”](#) section for your computer. To verify that the directory has been mounted correctly, type the following commands on the license server:

```
# cd /usr/maxplus2/adm ↵
# ls -l ↵
```


The **ls** command output must include the following lines, which list the **max2protd**, **lmgrd**, and **alterad** daemons:

```
-rwxr-xr-x 1 root 278528 Jun 01 13:03 alterad
-rwxr-xr-x 1 root 81920 Jun 01 13:04 lmgrd
-rwxr-xr-x 1 root 568 Jun 01 11:02 max2protd
```

The dates and file sizes may be different, but the three named files must be present. If the named files are not displayed, the directory has not been mounted correctly. Refer to the “[Configuring the File Server & User Environment](#)” section for your computer for instructions on how to mount the **/usr/maxplus2** directory.

If the files exist, you must verify that they have the permissions **-rwxr-xr-x**. If the executable bit is not set for **lmgrd** and **alterad**, type the following commands:

```
# cd /usr/maxplus2/adm ↵
# chmod 755 max2protd lmgrd alterad ↵
```

License Administration Options File

The entries in the options file control the operating parameters of the FLEXlm utility. The System Administrator can use these options to reserve licenses, restrict the use of licenses, and define user groups for use with license reservations. The options file can be edited with any text editor. The following options are available:

Option:	Action:
RESERVE	Reserves licenses for a user, host, display, or group of users.
INCLUDE	Includes a user, host, display, or group of users in a list of users who are allowed to use a software feature.
EXCLUDE	Excludes a user, host, display, or group of users from a list of users who are allowed to use a software feature.
GROUP	Defines a user group for use with the RESERVE, INCLUDE, and EXCLUDE options.

Option:	Action:
TIMEOUT	Specifies the time after which an inactive license is returned to the free pool, for use by someone else.
NOLOG	Causes messages of the specified type to be filtered out of the log output for lmgrd .

To set any number of options, you must create an options file and list its pathname as the fourth field on the DAEMON line for **alterad**.

An options file consists of lines in the following format:

```
RESERVE <number> <feature> {USER | HOST | DISPLAY | GROUP}
    <name>
INCLUDE <feature> {USER | HOST | DISPLAY | GROUP} <name>
EXCLUDE <feature> {USER | HOST | DISPLAY | GROUP} <name>
GROUP <name> <list of users>
TIMEOUT <feature> <timeout in seconds>
NOLOG {IN | OUT | DENIED | QUEUED}
```

Lines in an options file that begin with the pound character (#) are ignored and can be used as comments.

In the following example, the options file, called **local.options**, reserves a copy of the compile feature for user robert, three copies for user dalia, and a copy for anyone on a computer with the hostname mainline. The file also causes QUEUED messages to be omitted from the logfile and prevents user lori from using the compile feature.

```
RESERVE 1 compile USER robert
RESERVE 3 compile USER dalia
RESERVE 1 compile HOST mainline
EXCLUDE compile USER lori
NOLOG QUEUED
```

If these options are included in the file **/usr/local/flexlm/options/local.options**, the license file DAEMON line must be specified as follows:

```
DAEMON alterad /usr/maxplus2/adm/alterad
    /usr.local.flexlm/options/local.options ←
```

License Administration FLEXlm Utilities

The following FLEXlm utilities help the System Administrator manage the licensing activities on the network:

- **lmgrd**
- **lmstat**
- **lmdown**
- **lmremove**
- **lmreread**
- **lmver**
- **lmhostid**

lmgrd

The **lmgrd** utility is the main daemon program for FLEXlm. When it is active, it looks for a license file containing all required feature information.

Usage:

```
lmgrd [-2] [-b] [-c <license file>] [-d] [-l <log file>] [-p]
      [-s <interval>] [-t <timeout value>] [-i <feature>]
```

Option:	Action:
-2	Specifies V2 start-up arguments. The -2 option is the opposite of the -b option and is required if you intend to use the -p option.
-b	Specifies backward compatibility mode. The -b option is the default.
-c <license file>	Uses the specified license file. If this option is not specified, lmgrd looks for the environment variable LM_LICENSE_FILE. If the environment variable is not set, lmgrd looks for /usr/local/flexlm/licenses/license.dat .
-d	Specifies that hostnames that are read from the license file should have the local domain name appended to them before sending to a client. This option is useful when clients are accessing licenses from another domain.

Option:**Action:**

<code>-l <log file></code>	Specifies the output log file.
<code>-p</code>	Specifies that the lmdown and lmremove utilities can only be run by a “license administrator.” A “license administrator” is a member of the lmadmin group, or if the lmadmin group does not exist, “license administrator” is a member of group 0.
<code>-s <interval></code>	Specifies the log file time-stamp interval, in minutes. The default is 360 minutes.
<code>-t <timeout value></code>	Specifies the timeout interval during which daemons must complete their connections to each other. The default is 10 seconds. You can use a larger value if the daemons are running on busy systems or networks.
<code>-i <feature></code>	Displays information about the named feature, or, if no feature name is given, displays information about all features.



Altera recommends that you use the `-p` option when starting the **lmgrd** utility to provide security.



See also “**lmdown**” on [page 42](#) and “**lmstat**” on [page 41](#).

lmstat

The **lmstat** utility helps monitor the status of all network licensing activities, including:

- Active daemons
- Users of individual features
- Users of features served by a specific daemon

Usage:

```
lmstat [-a] [-S <daemon>] [-f <feature>] [-s <server>]
      [-t <timeout value>] [-c <license file>] [-A]
      [-l <regular expression>]
```

Option:	Action:
-a	Displays information about all features.
-S <daemon>	Lists all users of the specified daemon's features.
-f <feature>	Lists all users of the specified feature(s).
-s <server>	Displays the status of the specified server node(s).
-t <timeout value>	Specifies the timeout interval during which daemons must complete their connections to each other. The default is 10 seconds. You can use a larger value if the daemons are running on busy systems or networks.
-c <license file>	Uses the specified license file. If this option is not specified, lmstat looks for the environment variable <code>LM_LICENSE_FILE</code> . If the environment variable is not set, lmstat looks for <code>/usr/local/flexlm/licenses/license.dat</code> .
-A	Lists all active licenses.
-l <reg. expression>	Lists all users of the features matching the given regular expression.



See also “**lmgrd**” on [page 40](#).

lmdown

The **lmdown** utility instructs **lmgrd** and **alterad** to shut down. The license daemons write out their last messages to the log file, close the file, and exit. All licenses that have been given out by those daemons are rescinded, so that the next time a program verifies the license, the license is not valid.

Usage:

```
lmdown [-c <license file>]
```

The correct license file is in `/usr/maxplus2/adm/license.dat`. The System Administrator should protect the execution of **lmdown**, since shutting down the servers will cause loss of licenses.

Option:

`-c <license file>`

Action:

Uses the specified license file. If this option is not specified, **lmdown** looks for the environment variable `LM_LICENSE_FILE`. If the environment variable is not set, **lmdown** looks for `/usr/local/flexlm/licenses/license.dat`. In addition, **lmdown** accepts the `-c <license file>` argument that specifies the license file location.



See also “**lmgrd**” on [page 40](#), “**lmstat**” on [page 41](#), and “**lmreread**” on [page 44](#).

lmremove

The **lmremove** utility allows the System Administrator to remove a single user’s license for a specified feature. This utility is required if the licensed user was running the software on a node that subsequently crashed, causing the license to become unusable. The **lmremove** utility allows the license to return to the pool of available licenses.

Usage:

```
lmremove [-c <license file>] <feature> <user> <host> [<display>]
```

Option:

`-c <license file>`

Action:

Uses the specified license file. If a license file is not specified, **lmremove** looks for the environment variable `LM_LICENSE_FILE`. If no `-c` option is specified, **lmreread** looks for the environment variable `LM_LICENSE_FILE` to find the license file. If the environment variable is not set, **lmremove** looks for `/usr/local/flexlm/licenses/license.dat`.



See also “**lmstat**” on [page 41](#) and “**lmremove**” on [page 43](#).

Imreread

The **Imreread** utility allows the System Administrator to tell the license daemon to reread the license file and start any new daemons that have been added. This utility is useful if the data in the license file has changed. The new data can be loaded into the license daemon without shutting it down and restarting it. In addition, all pre-existing daemons will be signaled to reread the license file for changes in licensing information.

The **Imreread** utility uses the license filename from the command line (or the default filename, if no license filename is specified) to find the **alterad** daemon. The **Imreread** utility then gives **alterad** the command to reread the license file because the data in the file has changed. The **alterad** daemon always rereads the original file that it loaded. If the path to the license file read by **alterad** must be changed, the System Administrator must shut down **alterad** and restart with the new license file path.

The System Administrator cannot use **Imreread** if the SERVER node names or port numbers have been changed in the license file. In this case, the daemon must be shut down and restarted for the changes to take effect.

The **Imreread** utility does not change any option information specified in an options file. If the new license file specifies a different options file, the information is ignored. If the options file needs to be reread, the System Administrator must shut down the daemon and restart it.

Usage:

```
Imreread [-c <license file>]
```

Option:

-c <license file>

Action:

Uses the specified license file. If a license file is not specified, **Imreread** looks for the environment variable, LM_LICENSE_FILE. If no **-c** option is specified, **Imreread** looks for the environment variable LM_LICENSE_FILE to find the license file. If the environment variable is not set, **Imreread** looks for /usr/local/flexlm/licenses/license.dat.



See also “**Imdown**” on [page 42](#).

Imver

The **Imver** utility reports the FLEXlm version of a library or binary file.

Usage:

```
lmver <filename>
```

Imhostid

The **Imhostid** utility reports the host ID of a system.

Usage:

```
lmhostid
```

The following lines show sample output of **Imhostid**:

```
lmhostid-Copyright(C)1989,1990 Highland Software, Inc.  
The FLEXlm host ID of this machine is "69021c89"
```


Installing the PC Software Guard

To run MAX+PLUS II software on a PC, you must install the MAX+PLUS II Software Guard and/or the authorization code provided with your development system. If your development system includes a Software Guard, you must install the guard before you can enter the authorization code successfully.



If you are installing MAX+PLUS II software using an ES Site License, you do not need a Software Guard. Go to [“Specifying the Authorization Code for a Software Guard Installation”](#) on page 48 for more information.


To install the Software Guard on a PC or compatible computer, follow these steps:

1. Locate a parallel printer port (i.e., an LPT port) on the computer. If you have a printer connected to this port, disconnect it temporarily.
2. Insert the 25-pin male connector end of the Software Guard into the 25-pin female connector of the parallel printer port, as shown in [Figure 1-2](#).



1. Do not connect the MAX+PLUS II Software Guard to either end of an Iomega Zip or Ditto drive. Iomega Zip and Ditto drives can destroy a Software Guard by drawing more power than the guard is capable of handling.
2. Disconnect the Software Guard before using the parallel port with the Interlink file transfer program. Failure to do so can cause damage to the Software Guard.

Figure 1-2. Attaching the Software Guard to a PC

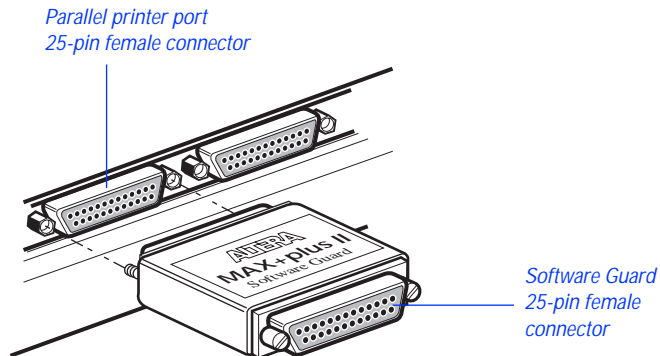

3. If necessary, re-insert the printer cable connector into the female connector of the Software Guard.
4. If you move the MAX+PLUS II Software Guard to a different port, you may need to update the **maxplus2.ini** file to include the name and location of the new port if MAX+PLUS II cannot locate the guard. For example, if you change the Software Guard port to LPT2, ensure that your **maxplus2.ini** file contains the following line:


```
GUARD_PORT=2
```

If you suspect that your Software Guard is faulty or damaged, contact the Altera Applications Department. Go to [Appendix B: Altera Support Services](#) for more information about technical support.

Specifying the Authorization Code or License File

Most development system configurations require you to enter an authorization code when you run MAX+PLUS II for the first time. When you start MAX+PLUS II for the first time, the **Authorization Code** dialog box (Options menu) appears automatically. See [Figure 1-3](#).

Figure 1-3. MAX+PLUS II Authorization Code Dialog Box

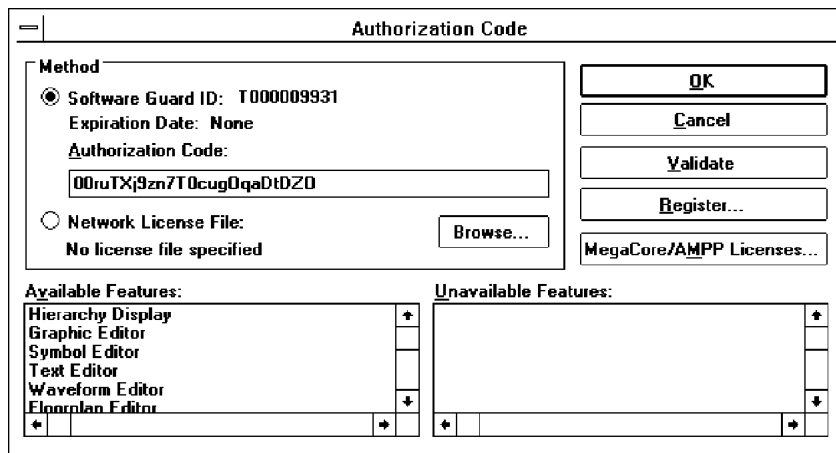

The steps required to specify the authorization code depend on whether you have a Software Guard or license file-based MAX+PLUS II system installation.

Specifying the Authorization Code for a Software Guard Installation

To specify the authorization code for an installation that includes a Software Guard, follow these steps:

1. In the **Authorization Code** dialog box, select *Software Guard ID* under *Method*, and verify that the ID number displayed matches the number printed on your Software Guard.
2. Type your authorization code, using upper- and lower-case letters exactly as provided by Altera.

3. Choose **Validate** to confirm your authorization code. Available features will be listed in the *Available Features* box.
4. Choose **OK**.

Specifying the License File for a License File Installation

To specify the license file that contains your authorization code, follow these steps:

- ✓ In the **Authorization Code** dialog box, select *Network License File* under *Method*. Available features will be listed in the *Available Features* box.

If the dialog box indicates that MAX+PLUS II cannot locate the **license.dat** file, choose **Browse** to open the **License File** dialog box and locate a suitable **license.dat** file.

MAX+PLUS II Site License Information

When you purchase a MAX+PLUS II development system for a single-user PC, it includes a site license to install an unlimited number of copies of the PLS-ES feature set. Feel free to pass MAX+PLUS II software along to your colleagues. The additional MAX+PLUS II systems on the site license have only one requirement: after installation, each individual user must contact Altera for an authorization code (at no cost). For details on getting an authorization code, go to [“Registering MAX+PLUS II Software” on page 4](#).

Specifying Authorization Codes for MegaCore & AMPP Licenses

To specify authorization codes for Altera-provided MegaCore megafunctions or AMPP-provided megafunctions, follow these steps:

1. In the **Authorization Code** dialog box, choose **MegaCore/AMPP Licenses**. The **MegaCore/AMPP Licenses** dialog box is displayed.
2. Type the megafunction ID number provided by Altera or an AMPP vendor in the *Megafunction ID* box.

3. Type the authorization code for your megafunction using upper- and lower-case letters, exactly as provided by Altera or the AMPP vendor, in the *License Authorization Code* box.
4. Choose **Add** to add the megafunction ID number and authorization code to the list of *Existing IDs/Authorization Codes* without closing the dialog box.

or:

Choose **OK**.

Once you enter the appropriate information and choose **OK**, you can fully compile the megafunction in MAX+PLUS II to generate output netlist files and programming files.

Installing the Adobe Acrobat Reader

The Altera-provided Software Interface Guides for EDA tools from Cadence, Mentor Graphics, Synopsys, and Viewlogic (Powerview) are provided in the \lit directory on the MAX+PLUS II CD-ROM in the Adobe Portable Document File (PDF) format. These files are readable with the Adobe Acrobat Reader 3.0, which requires 4 Mbytes of application RAM. If you do not already have a copy of the Adobe Acrobat Reader, you can install it from the MAX+PLUS II CD-ROM.

To install the Adobe Acrobat Reader on a PC running Windows NT or Windows 95, follow these steps:

1. Insert the MAX+PLUS II CD-ROM into your CD-ROM drive.
2. Choose **Run** (Start menu) and type <CD-ROM drive>:\acoread\win\32bit\setup.exe ↵.
3. Follow the instructions in the setup program.

To install the Adobe Acrobat Reader on a UNIX workstation, follow these steps:

1. Refer to the /acoread/instguid.txt file on the MAX+PLUS II CD-ROM for information on system requirements and compatibility.
2. Ensure that you are logged on as a superuser.
3. Mount the MAX+PLUS II CD-ROM as described in [Table 1-2](#) on [page 16](#).
4. If you have an HP 9000 Series 700/800 workstation, type the following commands:

```
# cd /cdrom/cdrom0/ACROREAD/UNIX ↵
# ./INSTALL ; 1 ↵
```

On other supported UNIX workstation platforms, type the following commands:

```
# cd /cdrom/cdrom0/acoread/unix ↵
# ./install ↵
```

5. Follow the instructions in the install program.

6. To run the Adobe Acrobat Reader, type the following command:

```
# /<installation directory>/bin/acroread ↵
```

Once you have installed the Adobe Acrobat Reader, you can read the following Software Interface Guide files in the \lit directory:

Document:

Cadence & MAX+PLUS II Software Interface Guide
Mentor Graphics & MAX+PLUS II Software Interface Guide
Viewlogic Powerview & MAX+PLUS II Software Interface Guide
Synopsys & MAX+PLUS II Software Interface Guide

Filename:

ac_sig.pdf
am_sig.pdf
av_sig.pdf
as_sig.pdf



Go to the MAX+PLUS II **read.me** file for information on other supported platforms for the Adobe Acrobat Reader.

Installing the Programming Hardware

Table 1-3 shows the programming hardware configurations that are available for use with MAX+PLUS II.

Table 1-3. MAX+PLUS II Programming Hardware Configurations

Platform	Hardware/Application
PC	The LP6 Programmer Card and the Master Programming Unit (MPU) base unit and its adapters.
PC	The FLEX Download Cable, which is used in conjunction with the LP6 Logic Programmer Card, MPU, and a Configuration EPROM programming adapter to download configuration data to FLEX 10K, FLEX 8000, FLEX 6000, and MAX 7000S devices in-system.
PC or UNIX workstation	The BitBlaster Serial Download Cable, which is connected to a serial port to download configuration data to FLEX 10K, FLEX 8000, and FLEX 6000 devices or to program MAX 9000 and MAX 7000S devices in-system.
PC	The ByteBlaster Parallel Download Cable, which is connected to a parallel port to download configuration data to FLEX 10K, FLEX 8000, and FLEX 6000 devices or to program MAX 9000 and MAX 7000S devices in-system.

This section covers the following topics:

- Installing PC-Based Programming Hardware..... 53
- Installing the LP6 Logic Programmer Card..... 54
- Installing the Master Programming Unit 57
- Installing the FLEX Download Cable on a PC..... 60
- Installing the BitBlaster on a PC or UNIX Workstation 61
- Installing the ByteBlaster on a PC 65

Installing PC-Based Programming Hardware

If you have purchased a system with an LP6 Logic Programmer card, you should follow the installation instructions in the order described here.

1. Install the LP6 card by following the instructions that begin on page 54.

2. Assemble the Master Programming Unit (MPU) and connect it to the Logic Programmer Card in your PC by following the instructions below.
3. Optionally connect the FLEX Download Cable to your PC by following the instructions that begin on page 60.

If your MAX+PLUS II system does not include an LP6 card, depending on which programming or configuration technique you plan to use, go through one of the following steps:

- Connect the BitBlaster Serial Download Cable to your PC by following the instructions that begin on page 61.
- Connect the ByteBlaster Parallel Download Cable to your PC by following the instructions that begin on page 65.

Installing the LP6 Logic Programmer Card


Follow these steps to install the LP6 card in Pentium- and 486-based PCs:

1. Be sure the computer's power is turned off.
2. Remove the cover of your computer. Refer to the documentation accompanying the computer for instructions.
3. Ensure that all four dipswitches on the LP6 card are turned on, as shown in Figure 1-4.




The default I/O address of the LP6 card is 280 hex. If you must change this address because of an addressing conflict, refer to “[Changing the LP6 Card Address Location](#)” on [page 56](#) for dipswitch settings for other I/O addresses.

Figure 1-4. Default Switch Settings on the LP6 Card

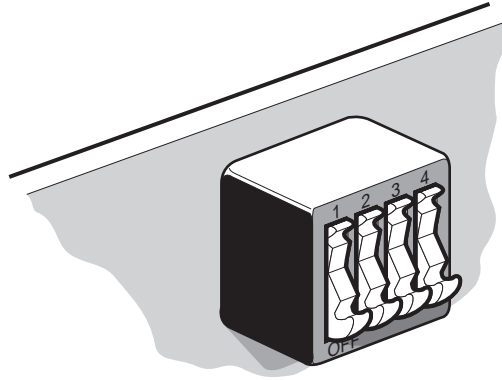


4. Select any convenient empty expansion slot for the LP6 card. If the expansion slot is covered, remove the screw that holds the expansion slot cover and remove the cover. See [Figure 1-5](#).

Figure 1-5. Removing the Expansion Slot Cover

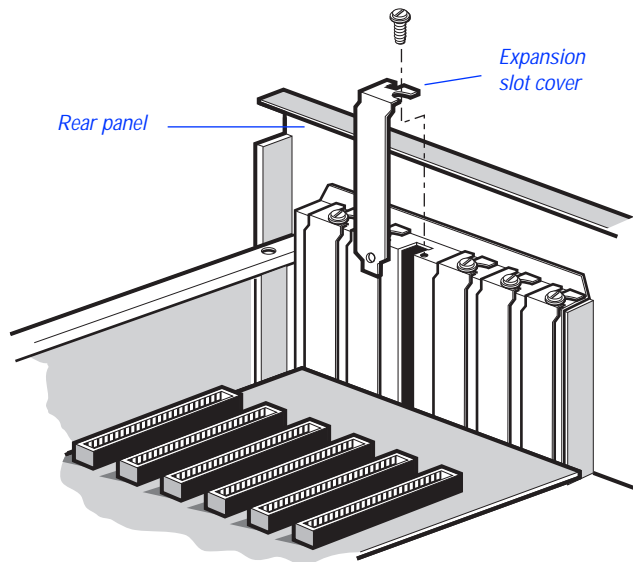

5. Insert the card into the expansion slot and fasten the retaining bracket with the screw from the slot cover. See [Figure 1-6](#).

Figure 1-6. Locking the Board in Place

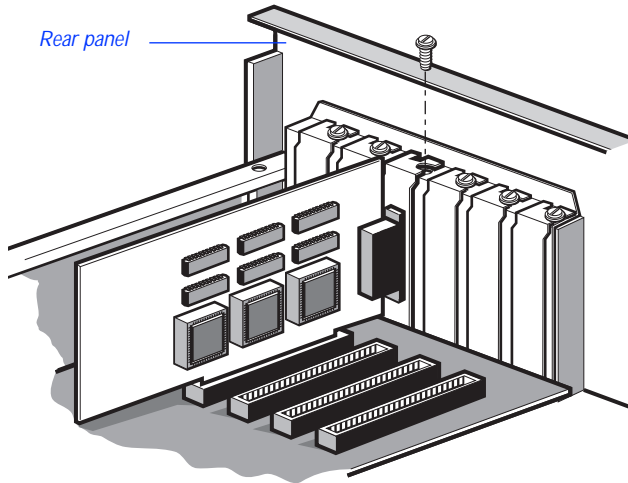

6. Tighten all the locking screws on all connectors.

Changing the LP6 Card Address Location

You can configure the LP6 card for different I/O addresses. [Table 1-4](#) lists the available I/O addresses and corresponding dipswitch settings. If you use an address other than 280 hex, you must update your hardware setup in MAX+PLUS II. Go to “Changing the Hardware Setup” in MAX+PLUS II Help for instructions.

Table 1-4. LP6 Card I/O Addresses

Base I/O Address (hex)	Dipswitch Setting			
Required Address Space 16 locations	(1=ON; 0=OFF)			
	1	2	3	4
270	0	0	0	0
260	1	0	0	0
250	0	1	0	0
240	1	1	0	0
230	0	0	1	0
220	1	0	1	0
210	0	1	1	0
200	1	1	1	0
2F0	0	0	0	1
2E0	1	0	0	1
2D0	0	1	0	1
2C0	1	1	0	1
2B0	0	0	1	1
2A0	1	0	1	1
290	0	1	1	1
280 (default)	1	1	1	1

Installing the Master Programming Unit


The Master Programming Unit (MPU) consists of a base unit and one or more adapters that program MAX+PLUS II-supported Altera devices. The PL-MPU programming unit is shipped with all PC-based development systems that include programming hardware.



MAX+PLUS II also supports an older programming unit, the PLE3-12A. The PLE3-12A programs some devices from the Classic and MAX 5000 device families.

Figure 1-7 shows an assembled PL-MPU Master Programming Unit.

Figure 1-7. Master Programming Unit

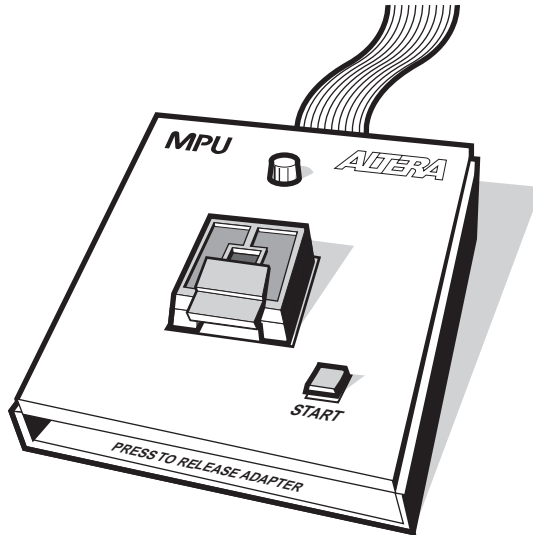

To install the MPU, follow these steps:


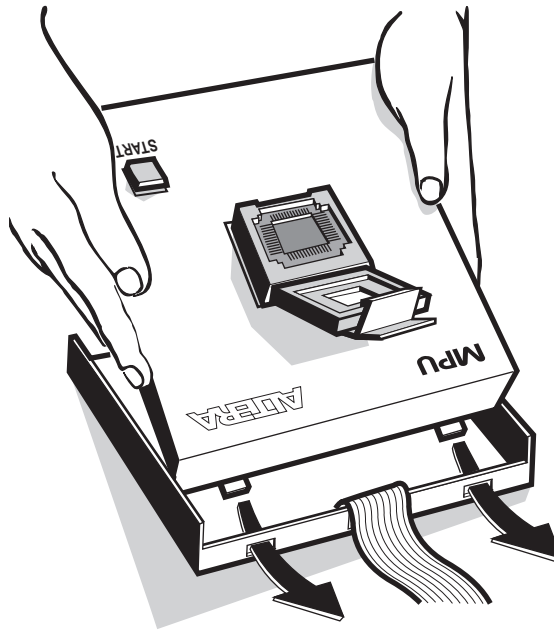
1. On the rear panel of your PC, connect the 25-pin flat ribbon cable of the PL-MPU base unit to the Logic Programmer card.
 Do *not* plug the PL-MPU ribbon cable into the parallel printer port.
2. Install the adapter by sliding the two tabs at the top of the adapter into the slots provided on the base unit. Be sure to use the appropriate adapter for the device you want to program. See [Figure 1-8](#).
3. Carefully lower and align the other end of the adapter, so that the connector in the adapter is inserted into the socket on the base unit. Press down firmly.
4. Open the MAX+PLUS II Programmer or Simulator. Choose the **Hardware Setup** command (Options menu), and select **LP6 + PL-MPU** in the *Hardware Type* drop-down list box. Choose **OK**.


Figure 1-8. Installing the Adapter



To release an adapter from the base unit:

1. Press down on the front of the unit, while holding down the other end. See [Figure 1-9](#).
2. Lift out the adapter.

Figure 1-9. Releasing the Adapter

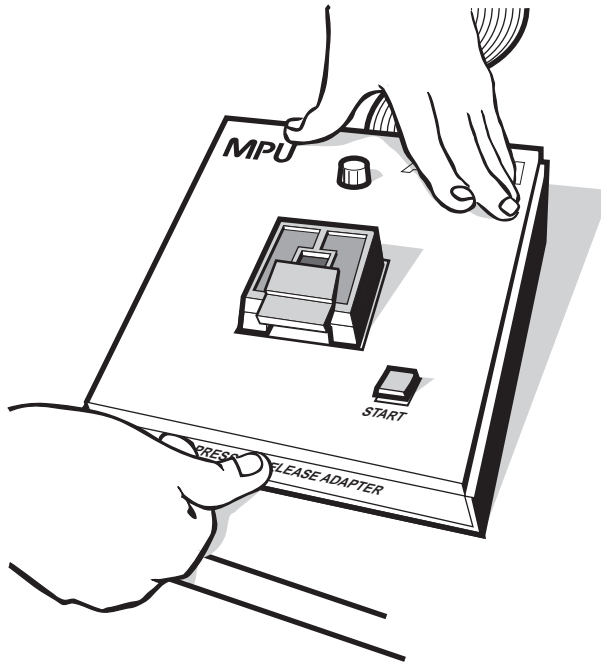


Installing the FLEX Download Cable on a PC

You can install an optional cable that allows you to download configuration data to configure FLEX 6000, FLEX 8000, and FLEX 10K devices in-system.

To set up the FLEX Download Cable for configuration:

1. Insert a Configuration EPROM programming adapter (e.g., PLMJ1213 or PLMT1064) into the PL-MPU base unit.
2. Connect the FLEX Download Cable to the 9-pin D-type connector on the Configuration EPROM programming adapter, as shown in [Figure 1-10](#).

Figure 1-10. Connecting the FLEX Download Cable

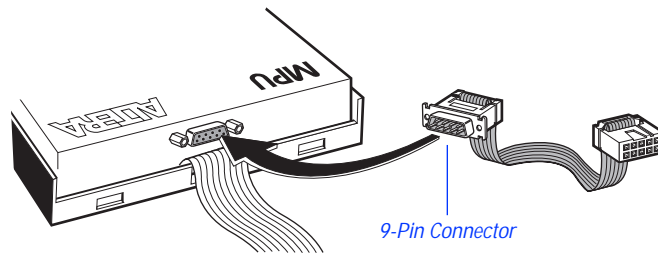

3. Connect the other end of the FLEX Download Cable to the 10-pin male header on the target printed circuit board.




Go to *Application Note 87 (Configuring FLEX 6000 Devices)*, *Application Note 33 (Configuring FLEX 8000 Devices)*, *Application Note 38 (Configuring Multiple FLEX 8000 Devices)*, and *Application Note 59 (Configuring FLEX 10K Devices)* for instructions on how to configure FLEX 6000, FLEX 8000, and FLEX 10K devices.

Installing the BitBlaster on a PC or UNIX Workstation

The BitBlaster can be used with a PC or UNIX workstation RS-232 serial port (called a "COM port" on a PC). To set up the BitBlaster for device configuration or programming follow these steps:


1. Connect the BitBlaster to the serial port on the computer. **Figure 1-11** shows a typical serial port on a PC.

Figure 1-11. Connecting the BitBlaster to the Serial Port on the Computer

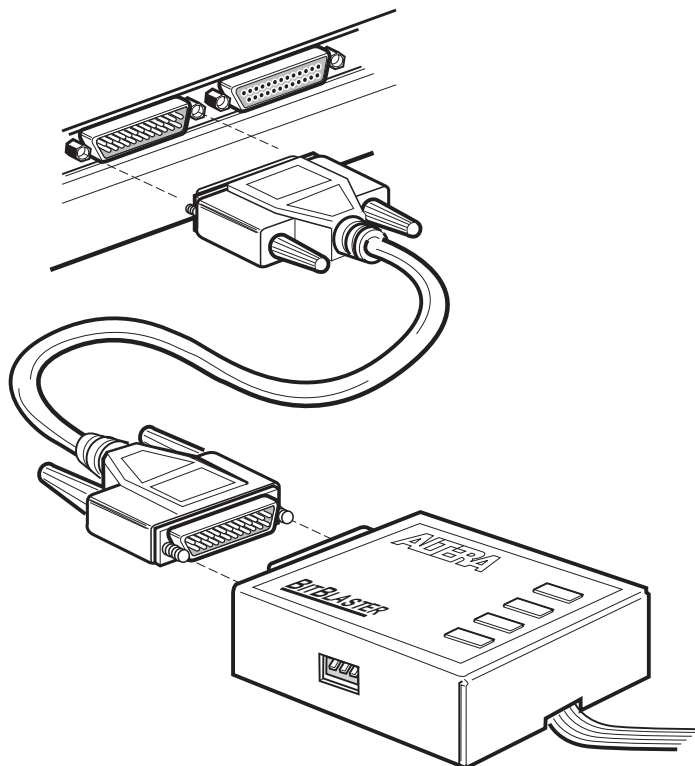

2. Connect the other end of the BitBlaster to the 10-pin male header on the target printed circuit board. See [Figure 1-12](#).

Figure 1-12. BitBlaster and 10-Pin Female Connector

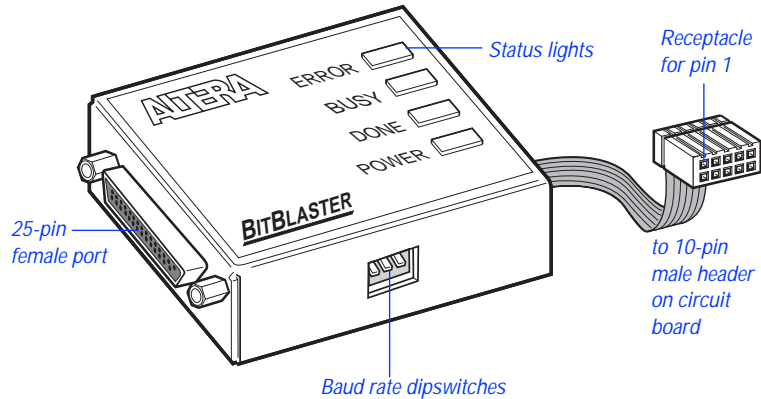

3. Open the MAX+PLUS II Programmer or Simulator. Choose the **Hardware Setup** command (Options menu), and select **BitBlaster** in the *Hardware Type* drop-down list box. Choose **OK**.
4. You must ensure that the baud rate of the BitBlaster, your computer's serial port, and the baud rate set in MAX+PLUS II are the same. If necessary, you can change the BitBlaster's baud rate by setting the dipswitches on the side panel. Dipswitch settings are listed in [Table 1-5](#).



You should set the baud rate as high as possible to accelerate configuration time. However, some PC-based systems cannot use baud rates higher than 9600 bps.

Table 1-5. BitBlaster Baud Rate Dipswitch Settings

Baud Rate (bps)	Dipswitches 1 through 3 (1 = ON; 0 = OFF)		
9,600	1	1	1
14,400	0	1	1
19,200	1	0	1
38,400	0	0	1
57,600	1	1	0
76,800	0	1	0
115,200	1	0	0
230,400	0	0	0



Go to “Changing the Hardware Setup” in MAX+PLUS II Help for more information on setting baud rates.

Configuring an IBM RISC System/6000 Workstation Serial Port for Programming

You can use the MAX+PLUS II Programmer and the BitBlaster to program and configure devices with an IBM RISC System/6000 workstation. In order to use the Programmer, you must turn off the Carrier Detect feature on the workstation’s serial port to ensure that it will not block the programming signals.

To turn off the Carrier Detect feature:

1. Become root.
2. Start the **smit** system management tool.
3. Choose the following options in order:
 - a. **Devices**
 - b. **TTY**
 - c. **Change/Show Characteristics of a TTY**
 - d. **tty0** or **tty1** (the name of the serial port you are currently using)
 - e. **Change/Show TTY Program**
4. Select the Entry Field for **STTY attributes for RUN TIME**.
5. Append `, clocal` to the end of the text string in the Entry Field.
6. Select the Entry Field for **STTY attributes for LOGIN**.
7. Append `, clocal` to the end of the text string in the Entry Field.
8. Press **↵**.

Installing the ByteBlaster on a PC

The ByteBlaster Parallel Download Cable is designed to be used with a PC parallel port (i.e., a printer port). You can connect the ByteBlaster directly to your PC's parallel port, or through the MAX+PLUS II Software Guard.


To install and set up the ByteBlaster for device configuration or programming, follow these steps:

1. If you are running the Windows NT 3.51 or 4.0 operating system, ensure that the Altera ByteBlaster driver is installed. Go to [“Installing Windows NT Drivers”](#) on page 10 for instructions.
2. Attach the ByteBlaster to a parallel port on your PC and insert the 10-pin female plug into the prototype system containing the target device, as shown in [Figure 1-13](#).



The board must supply power to the ByteBlaster.

Figure 1-13. ByteBlaster Parallel Port Download Cable

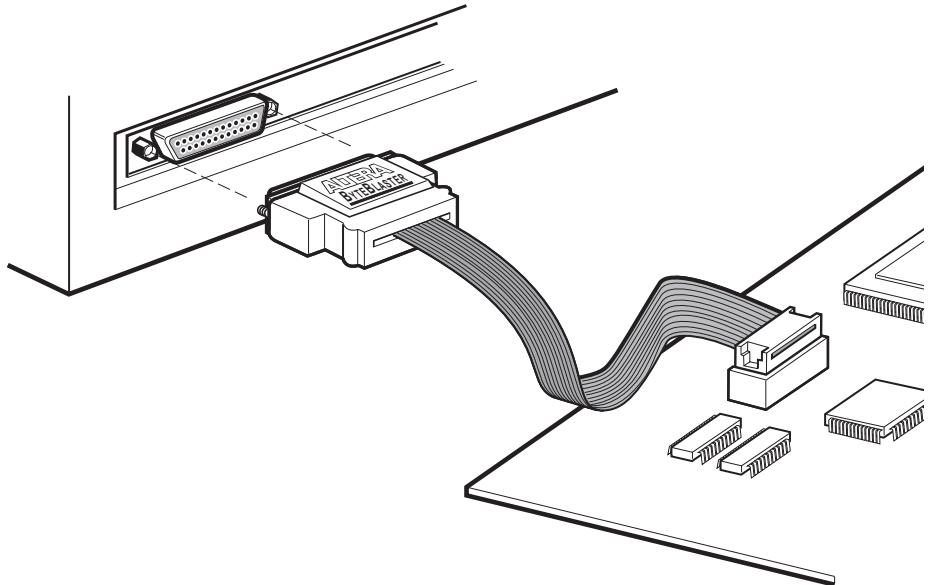

3. Open the MAX+PLUS II Programmer or Simulator. Choose the **Hardware Setup** command (Options menu), select *ByteBlaster* in the *Hardware Type* drop-down list box, and select the appropriate LPT port in the *Parallel Port* drop-down list box. Choose **OK**.



Go to “Changing the Hardware Setup” in MAX+PLUS II Help for more information on setting up the ByteBlaster.

Creating & Using a Local Copy of the maxplus2.ini File

The **maxplus2.ini** file is a software initialization file created during installation. It contains both Altera- and user-specified parameters that control the way MAX+PLUS II applications operate.

The **maxplus2.ini** file stores essential information for running MAX+PLUS II. For example, this file stores the pathnames of the Altera-provided primitive, megafunction, and macrofunction libraries and the default colors for your application windows.



If you delete this file, you must reinstall MAX+PLUS II.

The **maxplus2.ini** file can be stored in one of several locations: for a single-user PC installation, it is stored in the MAX+PLUS II system directory (\maxplus2); on a UNIX workstation, it is stored in your home directory. If you use a network copy of MAX+PLUS II, or if a single computer is used by several engineers, you must create a local copy of the **maxplus2.ini** file. You must then set up an environment variable that specifies the location of the file.

To set up a local copy of the **maxplus2.ini** file on a PC:

1. Copy the existing **maxplus2.ini** file to the desired drive and directory. You can also open the file in MAX+PLUS II with the **Open** command (File menu) and save it to the desired drive and directory with the **Save As** command (File menu).
2. Specify the drive and directory of your **maxplus2.ini** file in your Windows environment:



If you are using Windows NT 3.51 or 4.0, go through the following steps:

- a. Double-click Button 1 on the **System** icon in the Windows Control Panel. If you are using Windows NT 4.0, select the **Environment** tab.
- b. In the *Variable* box, type the following text:

MAXPLUS2_INI

- c. In the *Value* box, type the drive and directory name, e.g., d:\maxplus2.
- d. Choose **Set**, then **OK**.

or:

- ✓ If you are using Windows 95, go through the following steps:
 - a. Edit the **autoexec.bat** file that is used to boot up your computer to include the following line:

`set MAXPLUS2_INI=<drive and directory name> ↵`
 - b. Save the changes to **autoexec.bat** and reboot your computer.

To set up a local copy of the **maxplus2.ini** file on a UNIX workstation:

- ✓ Copy the existing **/usr/maxplus2/maxplus2.ini** file to your home directory with UNIX workstation commands. If you need to store the **maxplus2.ini** file in a different location, perform the following additional steps:
 - ✓ If you are running a C shell, add the line
`setenv MAXPLUS2_INI <directory name> ↵` to the **.cshrc** file in your **/usr/maxplus2** directory, then type the command
`source .cshrc ↵` at the C shell prompt.

or:

- ✓ If you are running a Bourne shell, add the line
`set MAXPLUS2_INI=<directory name> ↵` to the **.profile** file in your home directory, then type the command
`source .profile ↵` at the Bourne shell prompt.

MAX+PLUS II File Organization

During MAX+PLUS II installation, two directories are created: **\maxplus2** and **\max2work**. The **\maxplus2** directory contains system software and data files and includes the subdirectories described in [Table 1-6](#):



The pathnames below are shown using the PC pathname convention of backslash (\) characters, but UNIX pathnames use forward slash (/) characters. On a UNIX workstation, the **max2work** and **maxplus2** directories are subdirectories of the **/usr** directory. Otherwise the file and directory organization is identical on PCs and UNIX workstations, except where noted.

Table 1-6. MAX+PLUS II System Directory Structure (Part 1 of 2)

Directory	Description
.\adm	Contains FLEXlm license manager daemon, license files, and license manager executable files (UNIX workstation and network installations only).
.\bin	Contains the executable software program files (UNIX workstation installations only).
.\common	Contains common UNIX files (UNIX workstation installations only).
.\drivers	Contains Windows NT device drivers (PC installations for Windows NT only).
.\edc	Contains Altera-provided EDIF Command Files (.edc) that customize EDIF Output Files (.edo) for specific third-party simulation environments.
.\fonts	Contains Altera, Arial, and MS Sans Serif fonts (UNIX workstation installations only).
.\hp	Contains platform-specific files for HP 9000 Series 700/800 UNIX workstation installations.
.\lmf	Contains Altera-provided Library Mapping Files (.lmf) that map third-party logic functions to equivalent MAX+PLUS II logic functions.
.\max2inc	Contains Include Files (.inc) with Function Prototypes for Altera-provided macrofunctions. Function Prototypes list the ports (pinstubs) for macrofunctions that can be implemented in Altera Hardware Description Language (AHDL) Text Design Files (.tdf).
.\max2lib\edif	Contains primitives and macrofunctions used for third-party EDIF interfaces.

Table 1-6. MAX+PLUS II System Directory Structure (Part 2 of 2)

Directory	Description
.\max2lib\mega_lpm	Contains megafunctions, including Library of Parameterized Modules (LPM) functions, and the corresponding Include Files that contain their AHDL Function Prototypes.
.\max2lib\mf	Contains old-style 74-series and custom macrofunctions.
.\max2lib\prim	Contains Altera-provided primitives.
.\rs6000	Contains platform-specific files for IBM RISC System / 6000 UNIX workstation installations.
.\solaris	Contains platform-specific files for Solaris UNIX workstation installations.
.\sunos	Contains platform-specific files for SunOS UNIX workstation installations.
.\vhdlm\altera <i>Note (1)</i>	Contains the altera library with the maxplus2 package. This package includes all MAX+PLUS II primitives, megafunctions, and macrofunctions supported by VHDL.
.\vhdlm\ieee <i>Note (1)</i>	Contains the ieee library of VHDL packages, including std_logic_1164, std_logic_arith, std_logic_signed, and std_logic_unsigned.
.\vhdlm\std <i>Note (1)</i>	Contains the std library with the standard and textio packages defined in the <i>IEEE Standard VHDL Language Reference Manual</i> .
<i>Note:</i> (1) <i>mm</i> represents "87" or "93," indicating VHDL 1987 or 1993 support.	

The \max2work directory contains tutorial and sample files and includes the subdirectories described in [Table 1-7](#):

Table 1-7. MAX+PLUS II Working Directory Structure

Directory	Description
.\ahdl	Contains the sample files used to illustrate "How to Use AHDL" topics in MAX+PLUS II Help and in the <i>MAX+PLUS II AHDL</i> manual.
.\chiptrip	Contains all files for the chiptrip tutorial project described in this manual.
.\edif	Contains all sample files used to illustrate EDIF features in MAX+PLUS II Help.
.\tutorial	Contains the read.me file for the chiptrip tutorial. You should create the files for the chiptrip project in this subdirectory.

Table 1-7. MAX+PLUS II Working Directory Structure

Directory	Description
.\vhdl	Contains the sample files used to illustrate “How to Use VHDL” topics in MAX+PLUS II Help and in the <i>MAX+PLUS II VHDL</i> manual.
.\verilog	Contains the sample files used to illustrate “How to Use Verilog HDL” topics in MAX+PLUS II Help and in the <i>MAX+PLUS II Verilog HDL</i> manual.



Go to the Altera-provided Software Interface Guide for your third-party environment for information on the directory structure of the files installed for third-party interfaces to MAX+PLUS II.